SIPROTEC 4 7SJ64
Multifunction Protection Relay with Synchronization

Fig. 5/164
SIPROTEC 4 7SJ64 multifunction protection relay

Description

The SIPROTEC 4 7SJ64 can be used as a protective control and monitoring relay for distribution feeders and transmission lines of any voltage in networks that are earthed (grounded), low-resistance earthed, unearthed, or of a compensated neutral point structure. The relay is suited for networks that are radial or looped, and for lines with single or multi-terminal feeds. The SIPROTEC 4 7SJ64 is equipped with a synchronization function which provides the operation modes 'synchronization check' (classical) and 'synchronous/asynchronous switching' (which takes the CB mechanical delay into consideration). Motor protection comprises undercurrent monitoring, starting time supervision, restart inhibit, locked rotor, load jam protection as well as motor statistics.

The 7SJ64 is featuring the "flexible protection functions". Up to 20 protection functions can be added according to individual requirements. Thus, for example, rate-of-frequency-change protection or reverse power protection can be implemented.

The relay provides easy-to-use local control and automation functions. The number of controllable switchgear depends only on the number of available inputs and outputs. The integrated programmable logic (CFC) allows the user to implement their own functions, e.g. for the automation of switchgear (interlocking). CFC capacity is much larger compared to 7SJ63 due to extended CPU power. The user is able to generate user-defined messages as well.

The flexible communication interfaces are open for modern communication architectures with control systems.

Function overview

Protection functions
- Time-overcurrent protection
- Directional time-overcurrent protection
- Sensitive dir./non-dir. earth-fault detection
- Displacement voltage
- Intermittent earth-fault protection
- High-impedance restricted earth fault
- Inrush restraint
- Motor protection
- Overload protection
- Temperature monitoring
- Under-/overvoltage protection
- Under-/overfrequency protection
- Rate-of-frequency-change protection
- Power protection (e.g. reverse, factor)
- Breaker failure protection
- Negative-sequence protection
- Phase-sequence monitoring
- Synchronization
- Auto-reclosure
- Fault locator
- Lockout

Control functions/programmable logic
- Flexible number of switching devices
- Position of switching elements is shown on the graphic display
- Local/remote switching via key-operated switch
- Control via keyboard, binary inputs, DIGSI 4 or SCADA system
- Extended user-defined logic with CFC (e.g. interlocking)

Monitoring functions
- Operational measured values V, I, f,...
- Energy metering values W_p, W_q
- Circuit-breaker wear monitoring
- Slave pointer
- Trip circuit supervision
- Fuse failure monitor
- 8 oscillographic fault records
- Motor statistics

Communication interfaces
- System interface
  – IEC 60870-5-103, IEC 61850
  – PROFIBUS-FMS / DP
  – DNP 3.0 / MODBUS RTU
- Service interface for DIGSI 4 (modem)
- Additional interface for temperature detection (RTD-box)
- Front interface for DIGSI 4
- Time synchronization via IRIG B/DCF77

5

Application

Fig. 5/165   Function diagram

The SIPROTEC 4 7SJ64 unit is a numerical protection relay that also performs control and monitoring functions and therefore supports the user in cost-effective power system management, and ensures reliable supply of electric power to the customers. Local operation has been designed according to ergonomic criteria. A large, easy-to-read graphic display was a major design aim.

Control

The integrated control function permits control of disconnect devices (electrically operated/motorized switches) or circuit-breakers via the integrated operator panel, binary inputs, DIGSI 4 or the control and protection system (e.g. SICAM). The present status (or position) of the primary equipment can be displayed. 7SJ64 supports substations with single and duplicate busbars. The number of elements that can be controlled (usually 1 to 5) is only restricted by the number of inputs and outputs available. A full range of command processing functions is provided.

Programmable logic

The integrated logic characteristics (CFC) allow users to implement their own functions for automation of switchgear (interlocking) or a substation via a graphic user interface. Due to extended CPU power, the programmable logic capacity is much larger compared to 7SJ63. The user can also generate user-defined messages.

Line protection

The 7SJ64 units can be used for line protection of high and medium-voltage networks with earthed, low-resistance earthed, isolated or compensated neutral point.

Synchronization

In order to connect two components of a power system, the relay provides a synchronization function which verifies that switching ON does not endanger the stability of the power system.

The synchronization function provides the operation modes 'synchro-check' (classical) and 'synchronous/asynchronous switching' (which takes the c.-b. mechanical delay into consideration).

Motor protection

When protecting motors, the relays are suitable for asynchronous machines of all sizes.

Transformer protection

The 7SJ64 units perform all functions of backup protection supplementary to transformer differential protection. The inrush suppression effectively prevents tripping by inrush currents.

The high-impedance restricted earth-fault protection detects short-circuits and insulation faults of the transformer.

Backup protection

The relays can be used universally for backup protection.

Flexible protection functions

By configuring a connection between a standard protection logic and any measured or derived quantity, the functional scope of the relays can be easily expanded by up to 20 protection stages or protection functions.

Metering values

Extensive measured values, limit values and metered values permit improved system management.

ANSI No.	IEC	Protection functions
50, 50N	$I>$, $I>>$, $I>>>$ $I_E>$, $I_E>>$, $I_E>>>$	Definite-time overcurrent protection (phase/neutral)
50, 50N	$I>>>>$, $I_2>$ $I_E>>>>$	Additional definite-time overcurrent protection stages (phase/neutral) via flexible protection functions
51, 51V, 51N	I_p, I_{Ep}	Inverse-time overcurrent protection (phase/neutral), phase function with voltage-dependent option
67, 67N	$I_{dir}>$, $I_{dir}>>$, $I_{p\ dir}$ $I_{Edir}>$, $I_{Edir}>>$, $I_{Ep\ dir}$	Directional time-overcurrent protection (definite/inverse, phase/neutral) Directional comparison protection
67Ns/50Ns	$I_{EE}>$, $I_{EE}>>$, I_{EEp}	Directional/non-directional sensitive earth-fault detection
–		Cold load pick-up (dynamic setting change)
59N/64	V_E, $V_0>$	Displacement voltage, zero-sequence voltage
–	$I_{IE}>$	Intermittent earth fault
87N		High-impedance restricted earth-fault protection
50BF		Breaker failure protection
79M		Auto-reclosure
25		Synchronization
46	$I_2>$	Phase-balance current protection (negative-sequence protection)
47	$V_2>$, phase seq.	Unbalance-voltage protection and/or phase-sequence monitoring
49	$\vartheta>$	Thermal overload protection
48		Starting time supervision
51M		Load jam protection
14		Locked rotor protection
66/86		Restart inhibit
37	$I<$	Undercurrent monitoring
38		Temperature monitoring via external device, e.g. bearing temperature monitoring
27, 59	$V<$, $V>$	Undervoltage/overvoltage protection
32	$P<>$, $Q<>$	Reverse-power, forward-power protection
55	$\cos \varphi$	Power factor protection
81O/U	$f>$, $f<$	Overfrequency/underfrequency protection
81R	df/dt	Rate-of-frequency-change protection
21FL		Fault locator

5

Construction

Connection techniques and housing with many advantages

1/3, 1/2 and 1/1-rack sizes

These are the available housing widths of the 7SJ64 relays, referred to a 19" module frame system. This means that previous models can always be replaced. The height is a uniform 244 mm for flush-mounting housings and 266 mm for surface-mounting housings for all housing widths. All cables can be connected with or without ring lugs. Plug-in terminals are available as an option.

It is thus possible to employ prefabricated cable harnesses. In the case of surface mounting on a panel, the connection terminals are located above and below in the form of screw-type terminals. The communication interfaces are located in a sloped case at the top and bottom of the housing. The housing can also be supplied optionally with a detached operator panel (refer to Fig. 5/168), or without operator panel, in order to allow optimum operation for all types of applications.

Fig. 5/166
Flush-mounting housing with screw-type terminals

Fig. 5/167
Front view of 7SJ64 with 1/3x19" housing

Fig. 5/168
Housing with plug-in terminals and detached operator panel

Fig. 5/169
Surface-mounting housing with screw-type terminals

Fig. 5/170
Communication interfaces in a sloped case in a surface-mounting housing

Protection functions

Time-overcurrent protection (ANSI 50, 50N, 51,51V, 51N)

This function is based on the phase-selective measurement of the three phase currents and the earth current (four transformers). Three definite-time overcurrent protection elements (DMT) exist both for the phases and for the earth. The current threshold and the delay time can be set in a wide range. In addition, inverse-time overcurrent protection characteristics (IDMTL) can be activated. The inverse-time function provides – as an option – voltage-restraint or voltage-controlled operating modes. With the "flexible protection functions", further definite-time overcurrent stages can be implemented in the 7SJ64 unit.
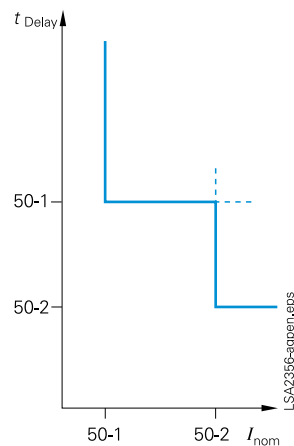
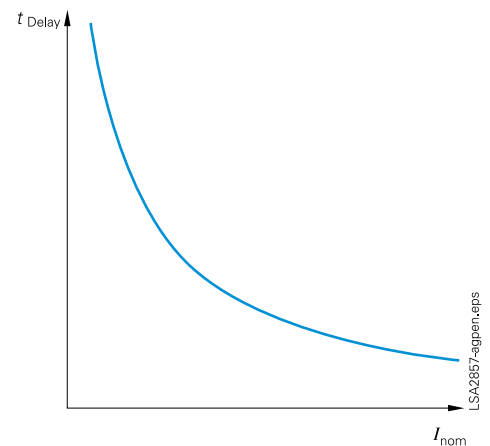**Fig. 5/171**
Definite-time overcurrent protection

Fig. 5/172
Inverse-time overcurrent protection

Available inverse-time characteristics

Characteristics acc. to	ANSI/IEEE	IEC 60255-3
Inverse	●	●
Short inverse	●	
Long inverse	●	●
Moderately inverse	●	
Very inverse	●	●
Extremely inverse	●	●
Definite inverse	●	

Reset characteristics

For easier time coordination with electromechanical relays, reset characteristics according to ANSI C37.112 and IEC 60255-3 / BS 142 standards are applied. When using the reset characteristic (disk emulation), a reset process is initiated after the fault current has disappeared. This reset process corresponds to the reverse movement of the Ferraris disk of an electromechanical relay (thus: disk emulation).

User-definable characteristics

Instead of the predefined time characteristics according to ANSI, tripping characteristics can be defined by the user for phase and earth units separately. Up to 20 current/time value pairs may be programmed. They are set as pairs of numbers or graphically in DIGSI 4.

Inrush restraint

The relay features second harmonic restraint. If the second harmonic is detected during transformer energization, pickup of non-directional and directional normal elements are blocked.

Cold load pickup/dynamic setting change

For directional and nondirectional time-overcurrent protection functions the initiation thresholds and tripping times can be switched via binary inputs or by time control.

Protection functions

Directional time-overcurrent protection (ANSI 67, 67N)

Directional phase and earth protection are separate functions. They operate in parallel to the non-directional overcurrent elements. Their pickup values and delay times can be set separately. Definite-time and inverse-time characteristic is offered. The tripping characteristic can be rotated about ± 180 degrees.

By means of voltage memory, directionality can be determined reliably even for close-in (local) faults. If the switching device closes onto a fault and the voltage is too low to determine direction, directio- nality (directional decision) is made with voltage from the voltage memory. If no voltage exists in the memory, tripping occurs according to the coordination schedule.

For earth protection, users can choose whether the direction is to be determined via zero-sequence system or negative-sequence system quantities (selectable). Using negative-sequence variables can be advantageous in cases where the zero voltage tends to be very low due to unfavorable zero-sequence impedances.

Directional comparison protection (cross-coupling)

It is used for selective protection of sections fed from two sources with instantaneous tripping, i.e. without the disadvantage of time coordination. The directional comparison protection is suitable if the distances between the protection stations are not significant and pilot wires are available for signal transmission. In addition to the directional comparison protection, the directional coordinated time-overcurrent protection is used for complete selective backup protection. If operated in a closed-circuit connection, an interruption of the transmission line is detected.

(Sensitive) directional earth-fault detection (ANSI 64, 67Ns/67N)

For isolated-neutral and compensated networks, the direction of power flow in the zero sequence is calculated from the zero-sequence current I_0 and zero-sequence voltage V_0. For networks with an isolated neutral, the reactive current component is evaluated; for compensated networks, the active current component or residual resistive current is evaluated.
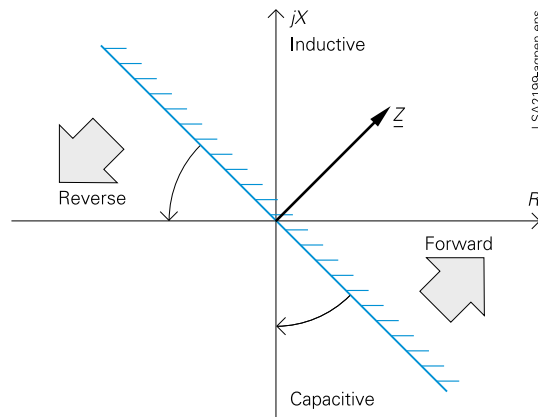

Fig. 5/173
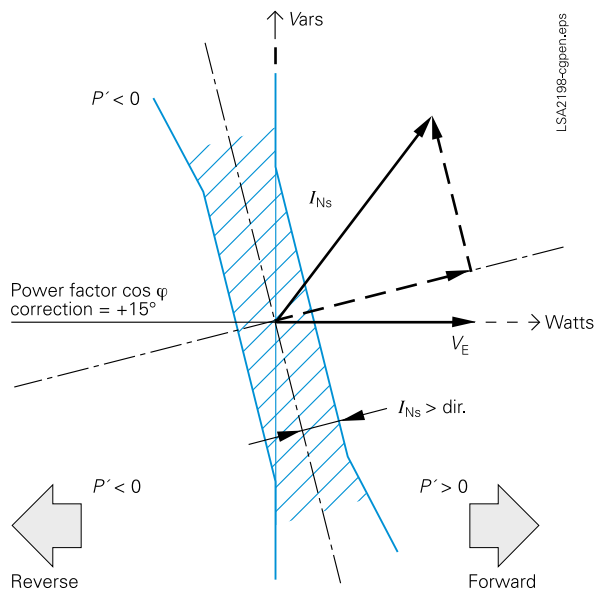Directional characteristic of the directional time-overcurrent protection

Fig. 5/174
Directional determination using cosine measurements for compensated networks

For special network conditions, e.g. high-resistance earthed networks with ohmic-capacitive earth-fault current or low-resistance earthed networks with ohmic-inductive current, the tripping characteristics can be rotated approximately ± 45 degrees.

Two modes of earth-fault direction detection can be implemented: tripping or "signalling only mode".

It has the following functions:

• TRIP via the displacement voltage V_E.
• Two instantaneous elements or one instantaneous plus one user-defined characteristic.
• Each element can be set in forward, reverse, or non-directional.

• The function can also be operated in the insensitive mode, as an additional short-circuit protection.

(Sensitive) earth-fault detection (ANSI 50Ns, 51Ns/50N, 51N)

For high-resistance earthed networks, a sensitive input transformer is connected to a phase-balance neutral current transformer (also called core-balance CT).

The function can also be operated in the insensitive mode, as an additional short-circuit protection.

Protection functions

Intermittent earth-fault protection

Intermittent (re-striking) faults occur due to insulation weaknesses in cables or as a result of water penetrating cable joints. Such faults either simply cease at some stage or develop into lasting short-circuits. During intermittent activity, however, star-point resistors in networks that are impedance-earthed may undergo thermal overloading. The normal earth-fault protection cannot reliably detect and interrupt the current pulses, some of which can be very brief.
The selectivity required with intermittent earth faults is achieved by summating the duration of the individual pulses and by triggering when a (settable) summed time is reached. The response threshold $I_{IE}>$ evaluates the r.m.s. value, referred to one systems period.

Phase-balance current protection (ANSI 46) (Negative-sequence protection)

In line protection, the two-element phase-balance current/negative-sequence protection permits detection on the high side of high-resistance phase-to-phase faults and phase-to-earth faults that are on the low side of a transformer (e.g. with the switch group Dy 5). This provides backup protection for high-resistance faults beyond the transformer.

Breaker failure protection (ANSI 50BF)

If a faulted portion of the electrical circuit is not disconnected upon issuance of a trip command, another command can be initiated using the breaker failure protection which operates the circuit-breaker, e.g. of an upstream (higher-level) protection relay. Breaker failure is detected if, after a trip command, current is still flowing in the faulted circuit. As an option, it is possible to make use of the circuit-breaker position indication.

Auto-reclosures (ANSI 79)

Multiple reclosures can be defined by the user and lockout will occur if a fault is present after the last reclosure. The following functions are possible:

- 3-pole ARC for all types of faults
- Separate settings for phase and earth faults
- Multiple ARC, one rapid auto-reclosure (RAR) and up to nine delayed auto-reclosures (DAR)
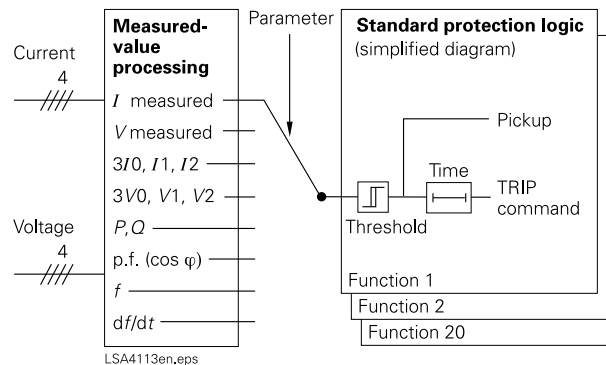- Starting of the ARC depends on the trip command selection (e.g. 46, 50, 51, 67)

Fig. 5/175   Flexible protection functions

- Blocking option of the ARC via binary inputs
- ARC can be initiated externally or via CFC
- The directional and non-directional elements can either be blocked or operated non-delayed depending on the auto-reclosure cycle
- Dynamic setting change of the directional and non-directional elements can be activated depending on the ready AR
- The AR CLOSE command can be given synchronous by use of the synchronization function.

Flexible protection functions

The 7SJ64 units enable the user to easily add on up to 20 protective functions. To this end, parameter definitions are used to link a standard protection logic with any chosen characteristic quantity (measured or derived quantity) (Fig. 5/175). The standard logic consists of the usual protection elements such as the pickup message, the parameter-definable delay time, the TRIP command, a blocking possibility, etc. The mode of operation for current, voltage, power and power factor quantities can be three-phase or single-phase. Almost all quantities can be operated as greater than or less than stages. All stages operate with protection priority.

Protection stages/functions attainable on the basis of the available characteristic quantities:

Function	ANSI No.
$I>$, $I_E>$	50, 50N
$V<$, $V>$, $V_E>$	27, 59, 64
$3I_0>$, $I_1>$, $I_2>$, I_2/I_1	50N, 46
$3V_0>$, $V_1><$, $V_2><$	59N, 47
$P><$, $Q><$	32
$\cos\varphi$ (p.f.)$><$	55
$f><$	81O, 81U
$df/dt><$	81R

For example, the following can be implemented:

- Reverse power protection (ANSI 32R)
- Rate-of-frequency-change protection (ANSI 81R)

Synchronization (ANSI 25)

- In case of switching ON the circuit-breaker, the units can check whether the two subnetworks are synchronized (classic synchro-check). Furthermore, the synchronizing function may operate in the "Synchronous/asynchronous switching" mode. The unit then distinguishes between synchronous and asynchronous networks:
In synchronous networks, frequency differences between the two subnetworks are almost non-existant. In this case, the circuit-breaker operating time does not need to be considered. Under asynchronous condition, however, this difference is markedly larger and the time window for switching is shorter. In this case, it is recommended to consider the operating time of the circuit-breaker.

Protection functions

The command is automatically pre-dated by the duration of the operating time of the circuit-breaker, thus ensuring that the contacts of the CB close at exactly the right time.

Up to 4 sets of parameters for the synchronizing function can be stored in the unit. This is an important feature when several circuit-breakers with different operating times are to be operated by one single relay.

Thermal overload protection (ANSI 49)

For protecting cables and transformers, an overload protection with an integrated pre-warning element for temperature and current can be applied. The temperature is calculated using a thermal homogeneous-body model (according to IEC 60255-8), which takes account both of the energy entering the equipment and the energy losses. The calculated temperature is constantly adjusted accordingly. Thus, account is taken of the previous load and the load fluctuations.

For thermal protection of motors (especially the stator), a further time constant can be set so that the thermal ratios can be detected correctly while the motor is rotating and when it is stopped. The ambient temperature or the temperature of the coolant can be detected serially via an external temperature monitoring box (resistance-temperature detector box, also called RTD- box). The thermal replica of the overload function is automatically adapted to the ambient conditions. If there is no RTD-box it is assumed that the ambient temperatures are constant.

High-impedance restricted earth-fault protection (ANSI 87N)

The high-impedance measurement principle is an uncomplicated and sensitive method for detecting earth faults, especially on transformers. It can also be applied to motors, generators and reactors when these are operated on an earthed network.

When the high-impedance measurement principle is applied, all current transformers in the protected area are connected in parallel and operated on one common resistor of relatively high R whose voltage is measured (see Fig. 5/176). In the case of 7SJ6 units, the voltage is measured by detecting the current through the (external) resistor R at the sensitive current measurement input I_{EE}.
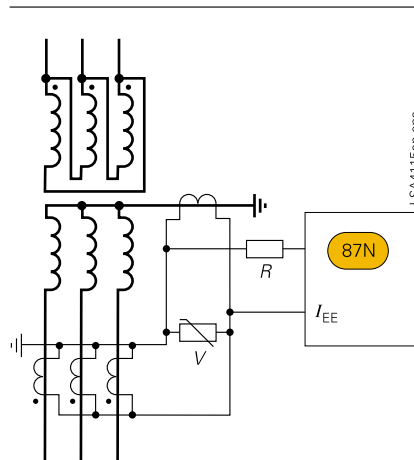

Fig. 5/176 High-impedance restricted earth-fault protection

The varistor V serves to limit the voltage in the event of an internal fault. It cuts off the high momentary voltage spikes occurring at transformer saturation. At the same time, this results in smoothing of the voltage without any noteworthy reduction of the average value. If no faults have occurred and in the event of external faults, the system is at equilibrium, and the voltage through the resistor is approximately zero. In the event of internal faults, an imbalance occurs which leads to a voltage and a current flow through the resistor R.

The current transformers must be of the same type and must at least offer a separate core for the high-impedance restricted earth-fault protection. They must in particular have the same transformation ratio and an approximately identical knee-point voltage. They should also demonstrate only minimal measuring errors.

Settable dropout delay times

If the devices are used in parallel with electro-mechanical relays in networks with intermittent faults, the long dropout times of the electromechanical devices (several hundred milliseconds) can lead to problems in terms of time grading. Clean time grading is only possible if the dropout time is approximately the same. This is why the parameter of dropout times can be defined for certain functions such as time-overcurrent protection, earth short-circuit and phase-balance current protection.

■ *Motor protection*

Restart inhibit (ANSI 66/86)

If a motor is started up too many times in succession, the rotor can be subject to thermal overload, especially the upper edges of the bars. The rotor temperature is calculated from the stator current. The reclosing lockout only permits start-up of the motor if the rotor has sufficient thermal reserves for a complete start-up (see Fig. 5/177).

Emergency start-up

This function disables the reclosing lockout via a binary input by storing the state of the thermal replica as long as the binary input is active. It is also possible to reset the thermal replica to zero.

Temperature monitoring (ANSI 38)

Up to two temperature monitoring boxes with a total of 12 measuring sensors can be used for temperature monitoring and detection by the protection relay. The thermal status of motors, generators and transformers can be monitored with this device. Additionally, the temperature of the bearings of rotating machines are monitored for limit value violation. The temperatures are being measured with the help of temperature detectors at various locations of the device to be protected. This data is transmitted to the protection relay via one or two temperature monitoring boxes (see "Accessories", page 5/219).

Protection functions

Starting time supervision (ANSI 48/14)

Starting time supervision protects the motor against long unwanted start-ups that might occur in the event of excessive load torque or excessive voltage drops within the motor, or if the rotor is locked. Rotor temperature is calculated from measured stator current. The tripping time is calculated according to the following equation:

for $I > I_{MOTOR\ START}$

$$t = \left(\frac{I_A}{I}\right)^2 \cdot T_A$$

I	=	Actual current flowing
$I_{MOTOR\ START}$	=	Pickup current to detect a motor start
t	=	Tripping time
I_A	=	Rated motor starting current
T_A	=	Tripping time at rated motor starting current (2 times, for warm and cold motor)

The characteristic (equation) can be adapted optimally to the state of the motor by applying different tripping times T_A in dependence of either cold or warm motor state. For differentiation of the motor state the thermal model of the rotor is applied.

If the trip time is rated according to the above formula, even a prolonged start-up and reduced voltage (and reduced start-up current) will be evaluated correctly. The tripping time is inverse (current dependent).

A binary signal is set by a speed sensor to detect a blocked rotor. An instantaneous tripping is effected.

Load jam protection (ANSI 51M)

Sudden high loads can cause slowing down and blocking of the motor and mechanical damages. The rise of current due to a load jam is being monitored by this function (alarm and tripping).

The overload protection function is too slow and therefore not suitable under these circumstances.
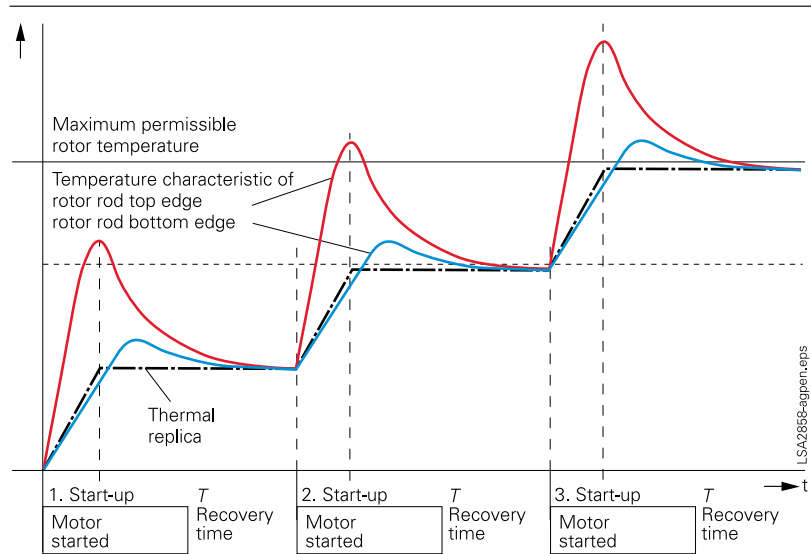

Fig. 5/177

Labels in figure: Maximum permissible rotor temperature; Temperature characteristic of rotor rod top edge rotor rod bottom edge; Thermal replica; 1. Start-up Motor started, T Recovery time; 2. Start-up Motor started, T Recovery time; 3. Start-up Motor started, T Recovery time; LSA2858-agpen.eps

Phase-balance current protection (ANSI 46) (Negative-sequence protection)

The negative-sequence / phase-balance current protection detects a phase failure or load unbalance due to network asymmetry and protects the rotor from impermissible temperature rise.

Undercurrent monitoring (ANSI 37)

With this function, a sudden drop in current, which can occur due to a reduced motor load, is detected. This may be due to shaft breakage, no-load operation of pumps or fan failure.

Motor statistics

Essential information on start-up of the motor (duration, current, voltage) and general information on number of starts, total operating time, total down time, etc. are saved as statistics in the device.

■ Voltage protection

Overvoltage protection (ANSI 59)

The two-element overvoltage protection detects unwanted network and machine overvoltage conditions. The function can operate either with phase-to-phase, phase-to-earth, positive phase-sequence or negative phase-sequence voltage. Three-phase and single-phase connections are possible.

Undervoltage protection (ANSI 27)

The two-element undervoltage protection provides protection against dangerous voltage drops (especially for electric machines). Applications include the isolation of generators or motors from the network to avoid undesired operating states and a possible loss of stability. Proper operating conditions of electrical machines are best evaluated with the positive-sequence quantities. The protection function is active over a wide frequency range (45 to 55, 55 to 65 Hz)[1]. Even when falling below this frequency range the function continues to work, however, with a greater tolerance band.

The function can operate either with phase-to-phase, phase-to-earth or positive phase-sequence voltage, and can be monitored with a current criterion. Three-phase and single-phase connections are possible.

Frequency protection (ANSI 81O/U)

Frequency protection can be used for overfrequency and underfrequency protection. Electric machines and parts of the system are

[1] The 45 to 55, 55 to 65 Hz range is available for f_N = 50/60 Hz.

protected from unwanted speed deviations. Unwanted frequency changes in the network can be detected and the load can be removed at a specified frequency setting. Frequency protection can be used over a wide frequency range (40 to 60, 50 to 70 Hz)[1]. There are four elements (selectable as overfrequency or underfrequency) and each element can be delayed separately. Blocking of the frequency protection can be performed if using a binary input or by using an undervoltage element.

Fault locator (ANSI 21FL)

The integrated fault locator calculates the fault impedance and the distance-to-fault. The results are displayed in Ω, kilometers (miles) and in percent of the line length.

Circuit-breaker wear monitoring

Methods for determining circuit-breaker contact wear or the remaining service life of a circuit-breaker (CB) allow CB maintenance intervals to be aligned to their actual degree of wear. The benefit lies in reduced maintenance costs.

There is no mathematically exact method of calculating the wear or the remaining service life of circuit-breakers that takes into account the arc-chamber's physical conditions when the CB opens. This is why various methods of determining CB wear have evolved which reflect the different operator philosophies. To do justice to these, the devices offer several methods:

- ΣI
- ΣI^x, with x = 1... 3
- $\Sigma i^2 t$

The devices additionally offer a new method for determining the remaining service life:
- Two-point method

The CB manufacturers double-logarithmic switching cycle diagram (see Fig. 5/181) and the breaking current at the time of contact opening serve as the basis for this method. After CB opening, the two-point method calculates the number of still possible switching cycles. To this end, the two points P1 and P2 only have to be set on the device. These are specified in the CB's technical data.

All of these methods are phase-selective and a limit value can be set in order to obtain an alarm if the actual value falls below or exceeds the limit value during determination of the remaining service life.

1) The 40 to 60, 50 to 70 Hz range is available for f_N = 50/60 Hz.

Commissioning

Commissioning could hardly be easier and is fully supported by DIGSI 4. The status of the binary inputs can be read individually and the state of the binary outputs can be set individually. The operation of switching elements (circuit-breakers, disconnect devices) can be checked using the switching functions of the bay controller. The analog measured values are represented as wide-ranging operational measured values. To prevent transmission of information to the control center during maintenance, the bay controller communications can be disabled to prevent unnecessary data from being transmitted. During commissioning, all indications with test marking for test purposes can be connected to a control and protection system.

Test operation

During commissioning, all indications can be passed to an automatic control system for test purposes.

■ Control and automatic functions

Control

In addition to the protection functions, the SIPROTEC 4 units also support all control and monitoring functions that are required for operating medium-voltage or high-voltage substations.

The main application is reliable control of switching and other processes.

The status of primary equipment or auxiliary devices can be obtained from auxiliary contacts and communicated to the 7SJ64 via binary inputs. Therefore it is possible to detect and indicate both the OPEN and CLOSED position or a fault or intermediate circuit-breaker or auxiliary contact position.

The switchgear or circuit-breaker can be controlled via:

– integrated operator panel
– binary inputs
– substation control and protection system
– DIGSI 4

Automation / user-defined logic

With integrated logic, the user can set, via a graphic interface (CFC), specific functions for the automation of switchgear or substation. Functions are activated via function keys, binary input or via communication interface.
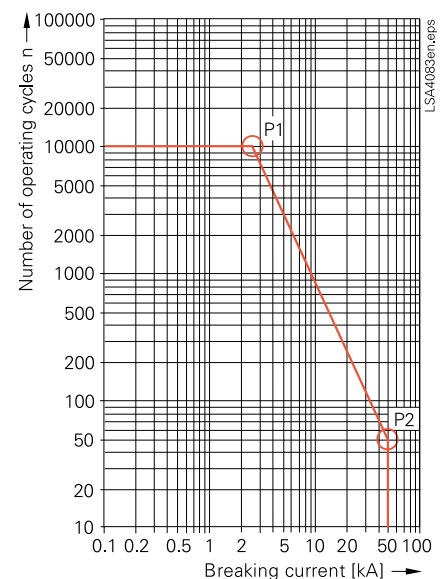
Fig. 5/178   CB switching cycle diagram

Switching authority

Switching authority is determined according to parameters, communication or by key-operated switch (when available).
If a source is set to "LOCAL", only local switching operations are possible. The following sequence of switching authority is laid down: "LOCAL"; DIGSI PC program, "REMOTE".

Key-operated switch

7SJ64 units are fitted with key-operated switch function for local/remote changeover and changeover between interlocked switching and test operation.

Command processing

All the functionality of command processing is offered. This includes the processing of single and double commands with or without feedback, sophisticated monitoring of the control hardware and software, checking of the external process, control actions using functions such as runtime monitoring and automatic command termination after output. Here are some typical applications:

- Single and double commands using 1, 1 plus 1 common or 2 trip contacts
- User-definable bay interlocks
- Operating sequences combining several switching operations such as control of circuit-breakers, disconnectors and earthing switches
- Triggering of switching operations, indications or alarm by combination with existing information

Functions

Motor control

The SIPROTEC 4 7SJ64 with high performance relays is well-suited for direct activation of the circuit-breaker, disconnector and earthing switch operating mechanisms in automated substations.

Interlocking of the individual switching devices takes place with the aid of programmable logic. Additional auxiliary relays can be eliminated. This results in less wiring and engineering effort.

Assignment of feedback to command

The positions of the circuit-breaker or switching devices and transformer taps are acquired by feedback. These indication inputs are logically assigned to the corresponding command outputs. The unit can therefore distinguish whether the indication change is a consequence of switching operation or whether it is a spontaneous change of state.

Chatter disable

Chatter disable feature evaluates whether, in a configured period of time, the number of status changes of indication input exceeds a specified figure. If exceeded, the indication input is blocked for a certain period, so that the event list will not record excessive operations.

Indication filtering and delay

Binary indications can be filtered or delayed.

Filtering serves to suppress brief changes in potential at the indication input. The indication is passed on only if the indication voltage is still present after a set period of time.

In the event of indication delay, there is a wait for a preset time. The information is passed on only if the indication voltage is still present after this time.

Indication derivation

A further indication (or a command) can be derived from an existing indication. Group indications can also be formed. The volume of information to the system interface can thus be reduced and restricted to the most important signals.
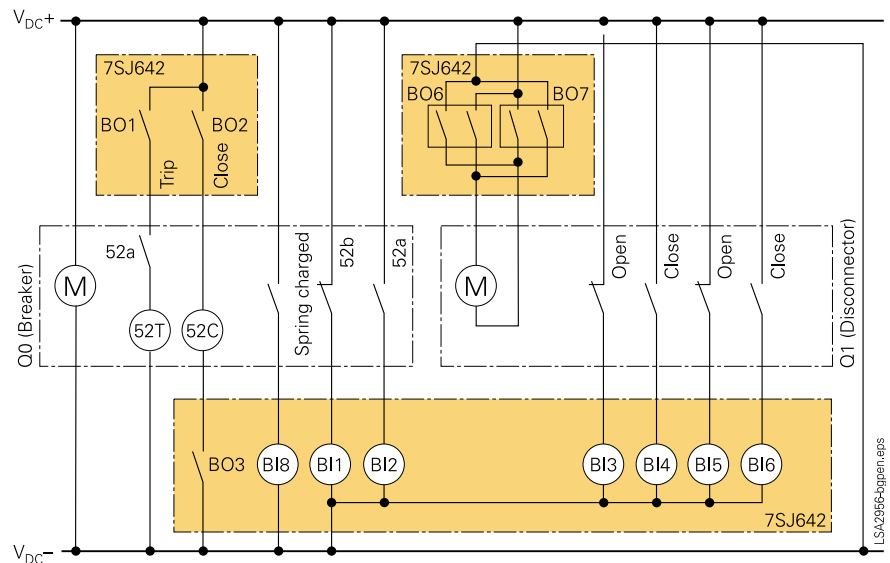

Fig. 5/179
Typical wiring for 7SJ642 motor direct control (simplified representation without fuses)
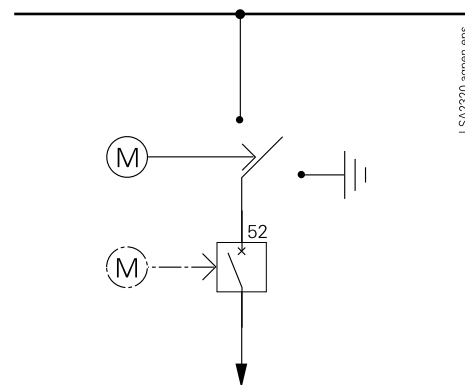Binary output BO6 and BO7 are interlocked so that only one set of contacts are closed at a time.

Fig. 5/180 Example: Single busbar with circuit-breaker and motor-controlled three-position switch
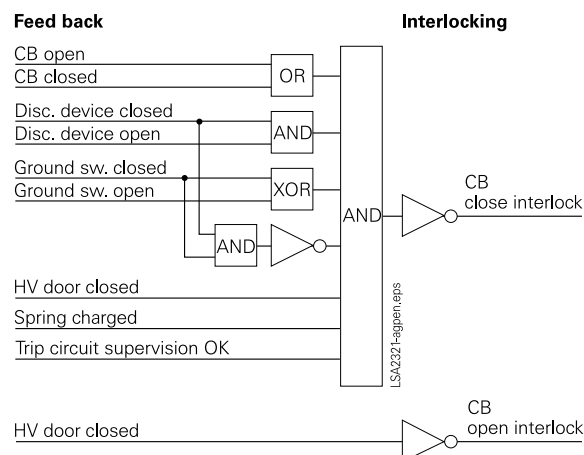
Fig. 5/181 Example: Circuit-breaker interlocking

Functions

Measured values

The r.m.s. values are calculated from the acquired current and voltage along with the power factor, frequency, active and reactive power. The following functions are available for measured value processing:

- Currents I_{L1}, I_{L2}, I_{L3}, I_E, I_{EE} (67Ns)
- Voltages V_{L1}, V_{L2}, V_{L3}, V_{L1L2}, V_{L2L3}, V_{L3L1}, V_{syn}
- Symmetrical components
  I_1, I_2, $3I_0$; V_1, V_2, V_0
- Power Watts, Vars, VA/P, Q, S
  (P, Q: total and phase-selective)
- Power factor (cos φ)
  (total and phase-selective)
- Frequency
- Energy $\pm$ kWh, $\pm$ kVArh, forward and reverse power flow
- Mean as well as minimum and maximum current and voltage values
- Operating hours counter
- Mean operating temperature of overload function
- Limit value monitoring
- Limit values are monitored using programmable logic in the CFC. Commands can be derived from this limit value indication.
- Zero suppression
  In a certain range of very low measured values, the value is set to zero to suppress interference.

Metered values

For internal metering, the unit can calculate an energy metered value from the measured current and voltage values. If an external meter with a metering pulse output is available, the SIPROTEC 4 unit can obtain and process metering pulses via an indication input.

The metered values can be displayed and passed on to a control center as an accumulation with reset. A distinction is made between forward, reverse, active and reactive energy.

Switchgear cubicles
for high/medium voltage

All units are designed specifically to meet the requirements of high/medium-voltage applications.

In general, no separate measuring instruments (e.g. for current, voltage, frequency measuring transducer ...) or additional control components are necessary.

LSP2078afp.eps

Fig. 5/182
NX PLUS panel (gas-insulated)

Communication

In terms of communication, the units offer substantial flexibility in the context of connection to industrial and power automation standards. Communication can be extended or added on thanks to modules for retrofitting on which the common protocols run. Therefore, also in the future it will be possible to optimally integrate units into the changing communication infrastructure, for example in Ethernet networks (which will also be used increasingly in the power supply sector in the years to come).

Serial front interface

There is a serial RS232 interface on the front of all the units. All of the unit's functions can be set on a PC by means of the DIGSI 4 protection operation program. Commissioning tools and fault analysis are also built into the program and are available through this interface.

Rear-mounted interfaces[1]

A number of communication modules suitable for various applications can be fitted in the rear of the flush-mounting housing. In the flush-mounting housing, the modules can be easily replaced by the user.
The interface modules support the following applications:

- Time synchronization interface
  All units feature a permanently integrated electrical time synchronization interface. It can be used to feed timing telegrams in IRIG-B or DCF77 format into the units via time synchronization receivers.
- System interface
  Communication with a central control system takes place through this interface. Radial or ring type station bus topologies can be configured depending on the chosen interface. Furthermore, the units can exchange data through this interface via Ethernet and IEC 61850 protocol and can also be operated by DIGSI.
- Service interface
  The service interface was conceived for remote access to a number of protection units via DIGSI. It can be an electrical RS232/RS485 interface. For special applications, a maximum of two temperature monitoring boxes (RTD-box) can be connected to this interface as an alternative.
- Additional interface
  Up to 2 RTD-boxes can be connected via this interface.

1) For units in panel surface-mounting housings please refer to note on page 5/215.

System interface protocols (retrofittable)

IEC 61850 protocol

Since 2004, the Ethernet-based IEC 61850 protocol is the worldwide standard for protection and control systems used by power supply corporations. Siemens was the first manufacturer to support this standard. By means of this protocol, information can also be exchanged directly between bay units so as to set up simple masterless systems for bay and system interlocking. Access to the units via the Ethernet bus is also possible with DIGSI. It is also possible to retrieve operating and fault messages and fault recordings via a browser. This Web monitor also provides a few items of unit-specific information in browser windows.

IEC 60870-5-103 protocol

The IEC 60870-5-103 protocol is an international standard for the transmission of protective data and fault recordings. All messages from the unit and also control commands can be transferred by means of published, Siemens-specific extensions to the protocol.
Redundant solutions are also possible. Optionally it is possible to read out and alter individual parameters (only possible with the redundant module).

PROFIBUS-DP protocol

PROFIBUS-DP is the most widespread protocol in industrial automation. Via PROFIBUS-DP, SIPROTEC units make their information available to a SIMATIC controller or, in the control direction, receive commands from a central SIMATIC. Measured values can also be transferred.

MODBUS RTU protocol

This uncomplicated, serial protocol is mainly used in industry and by power supply corporations, and is supported by a number of unit manufacturers. SIPROTEC units function as MODBUS slaves, making their information available to a master or receiving information from it. A time-stamped event list is available.
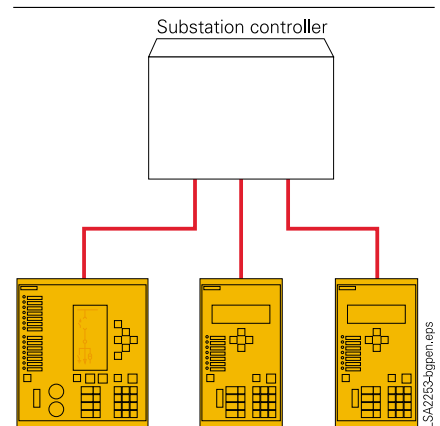
Fig. 5/183
IEC 60870-5-103: Radial fiber-optic connection
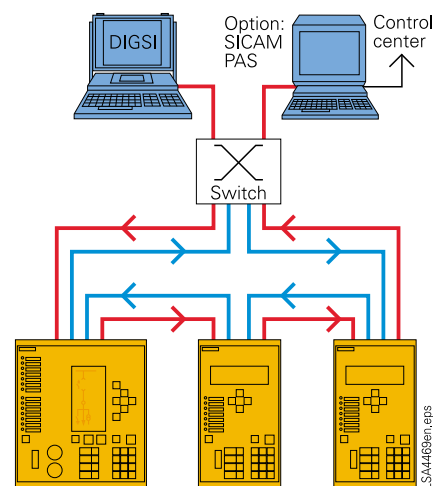
Fig. 5/184
Bus structure for station bus with Ethernet and IEC 61850, fiber-optic ring

Communication

DNP 3.0 protocol

Power supply corporations use the serial DNP 3.0 (Distributed Network Protocol) for the station and network control levels. SIPROTEC units function as DNP slaves, supplying their information to a master system or receiving information from it.

System solutions for protection and station control

Together with the SICAM power automation system, SIPROTEC 4 can be used with PROFIBUS-FMS. Over the low-cost electrical RS485 bus, or interference-free via the optical double ring, the units exchange information with the control system.

Units featuring IEC 60870-5-103 interfaces can be connected to SICAM in parallel via the RS485 bus or radially by fiber-optic link. Through this interface, the system is open for the connection of units of other manufacturers (see Fig. 5/183).

Because of the standardized interfaces, SIPROTEC units can also be integrated into systems of other manufacturers or in SIMATIC. Electrical RS485 or optical interfaces are available. The optimum physical data transfer medium can be chosen thanks to opto-electrical converters. Thus, the RS485 bus allows low-cost wiring in the cubicles and an interference-free optical connection to the master can be established.

For IEC 61850, an interoperable system solution is offered with SICAM PAS. Via the 100 Mbits/s Ethernet bus, the units are linked with PAS electrically or optically to the station PC. The interface is standardized, thus also enabling direct connection of units of other manufacturers to the Ethernet bus. With IEC 61850, however, the units can also be used in other manufacturers' systems (see Fig. 5/184).
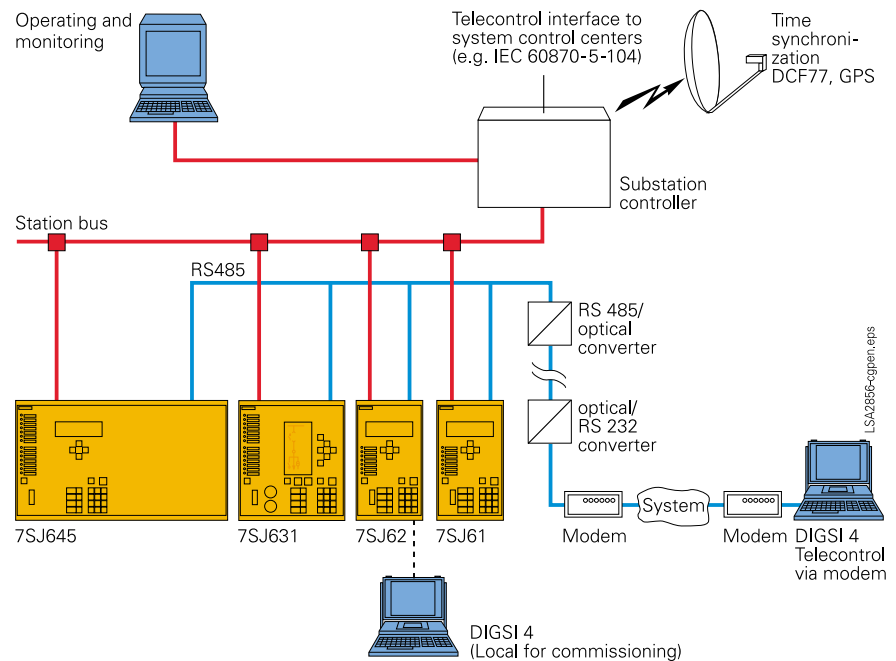
Fig. 5/185
System solution/communication

Fig. 5/186
Optical Ethernet communication module
for IEC 61850 with integrated Ethernet-switch

Typical connections

■ *Connection of current and voltage transformers*

Standard connection

For earthed networks, the earth current is obtained from the phase currents by the residual current circuit.
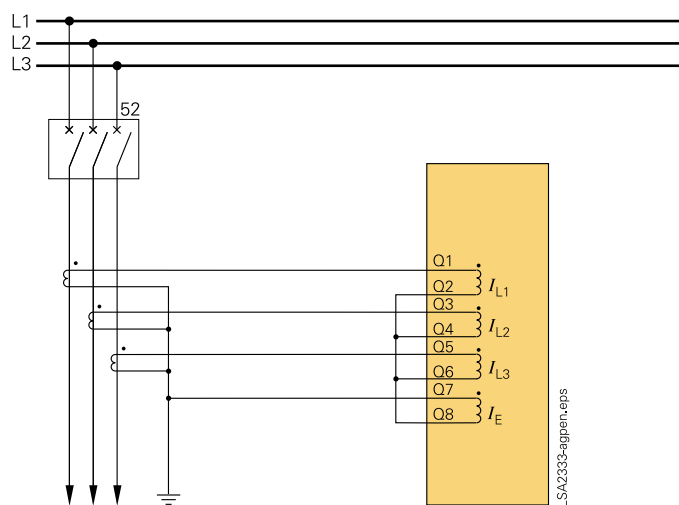
Fig. 5/187
Residual current circuit without directional element
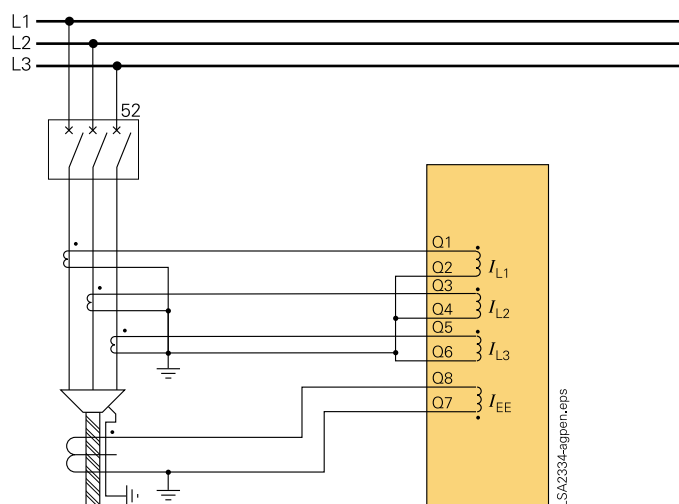
Fig. 5/188
Sensitive earth current detection without directional element
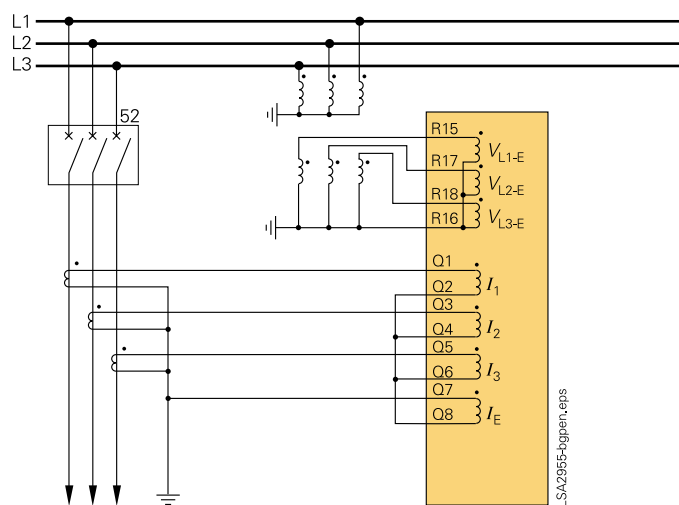
Fig. 5/189
Residual current circuit with directional element

Typical connections

Connection for compensated networks

The figure shows the connection of two phase-to-earth voltages and the V_E voltage of the open delta winding and a phase-earth neutral current transformer for the earth current. This connection maintains maximum precision for directional earth-fault detection and must be used in compensated networks.
Fig. 5/190 shows sensitive directional earth-fault detection.
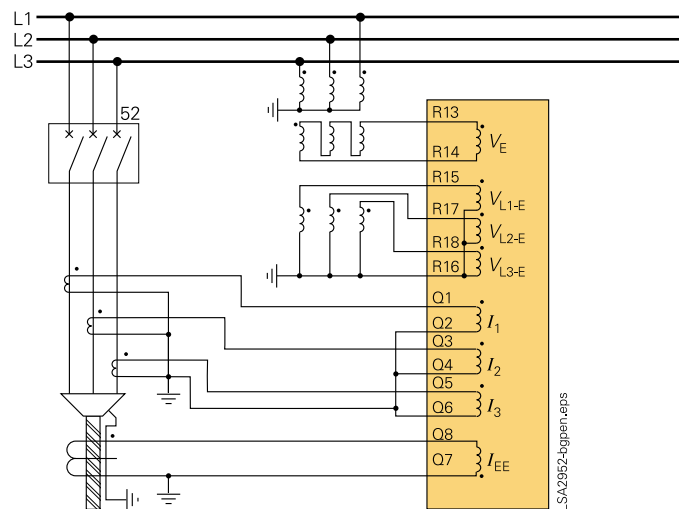
Fig. 5/190
Sensitive directional earth-fault detection with directional element for phases

Connection for isolated-neutral or compensated networks only

If directional earth-fault protection is not used, the connection can be made with only two phase current transformers. Directional phase short-circuit protection can be achieved by using only two primary transformers.
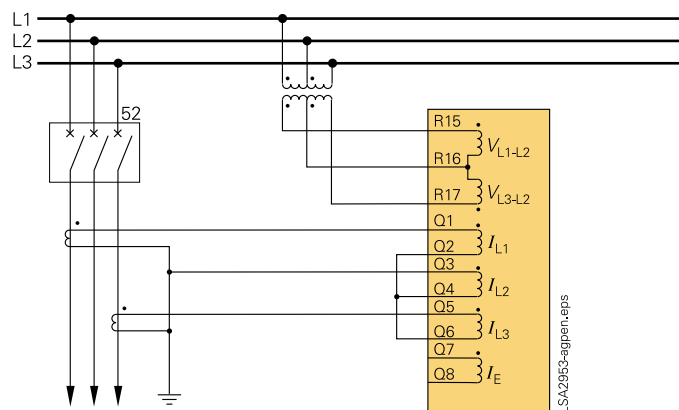
Fig. 5/191
Isolated-neutral or compensated networks

Connection for the synchronization function

The 3-phase system is connected as reference voltage, i. e. the outgoing voltages as well as a single-phase voltage, in this case a busbar voltage, that has to be synchronized.
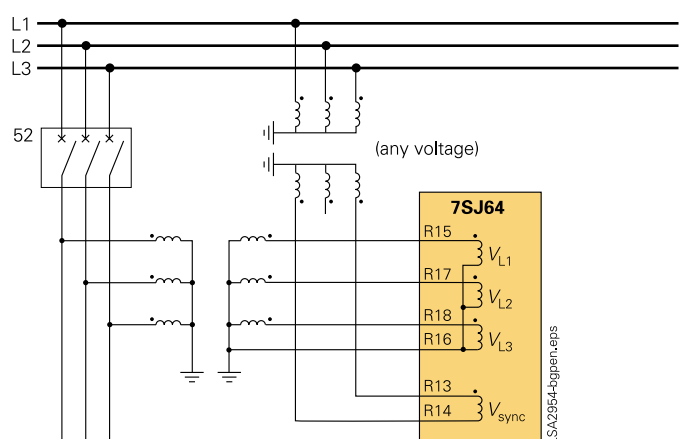
Fig. 5/192
Measuring of the busbar voltage and the outgoing feeder voltage for synchronization

Overview of connection types

Type of network	Function	Current connection	Voltage connection
(Low-resistance) earthed network	Time-overcurrent protection phase/earth non-directional	Residual circuit, with 3 phase-current transformers required, phase-balance neutral current transformer possible	-
(Low-resistance) earthed networks	Sensitive earth-fault protection	Phase-balance neutral current transformers required	-
Isolated or compensated networks	Time-overcurrent protection phases non-directional	Residual circuit, with 3 or 2 phase-current transformers possible	-
(Low-resistance) earthed networks	Time-overcurrent protection phases directional	Residual circuit, with 3 phase-current transformers possible	Phase-to-earth connection or phase-to-phase connection
Isolated or compensated networks	Time-overcurrent protection phases directional	Residual circuit, with 3 or 2 phase-current transformers possible	Phase-to-earth connection or phase-to-phase connection
(Low-resistance) earthed networks	Time-overcurrent protection earth directional	Residual circuit, with 3 phase-current transformers required, phase-balance neutral current transformers possible	Phase-to-earth connection required
Isolated networks	Sensitive earth-fault protection	Residual circuit, if earth current $> 0.05\ I_N$ on secondary side, otherwise phase-balance neutral current transformers required	3 times phase-to-earth connection or phase-to-earth connection with open delta winding
Compensated networks	Sensitive earth-fault protection $\cos\varphi$ measurement	Phase-balance neutral current transformers required	Phase-to-earth connection with open delta winding required

■ *Application examples*

Synchronization function

When two subnetworks must be interconnected, the synchronization function monitors whether the subnetworks are synchronous and can be connected without risk of losing stability.

As shown in Fig. 5/193, load is being fed from a generator to a busbar via a transformer. It is assumed that the frequency difference of the 2 subnetworks is such that the device determines asynchronous system conditions.

The voltages of the busbar and the feeder should be the same when the contacts are made; to ensure this condition the synchronism function must run in the "synchronous/asynchronous switching" mode.
In this mode, the operating time of the CB can be set within the relay.
Differences between angle and frequency can then be calculated by the relay while taking into account the operating time of the CB. From these differences, the unit derives the exact time for issuing the CLOSE command under asynchronous conditions.
When the contacts close, the voltages will be in phase.

The vector group of the transformer can be considered by setting parameters. Thus no external circuits for vector group adaptation are required.

This synchronism function can be applied in conjunction with the auto-reclosure function as well as with the control function CLOSE commands (local/remote).
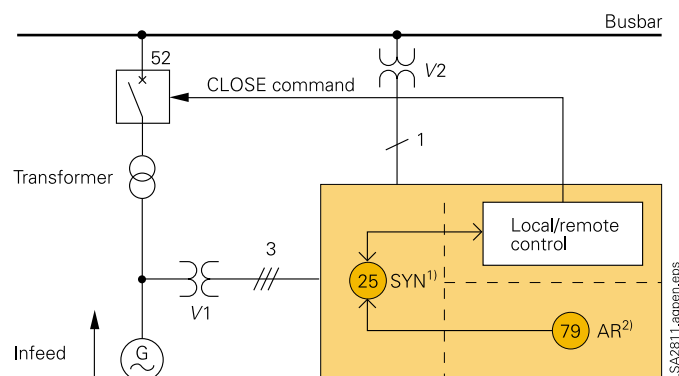
Fig. 5/193   Measuring of busbar and feeder voltages for synchronization

1) Synchronization function
2) Auto-reclosure function

Typical applications

■ Connection of circuit-breaker

Undervoltage releases

Undervoltage releases are used for automatic tripping of high-voltage motors.

Example:
DC supply voltage of control system fails and manual electric tripping is no longer possible.

Automatic tripping takes place when voltage across the coil drops below the trip limit. In Figure 5/194, tripping occurs due to failure of DC supply voltage, by automatic opening of the live status contact upon failure of the protection unit or by short-circuiting the trip coil in event of a network fault.
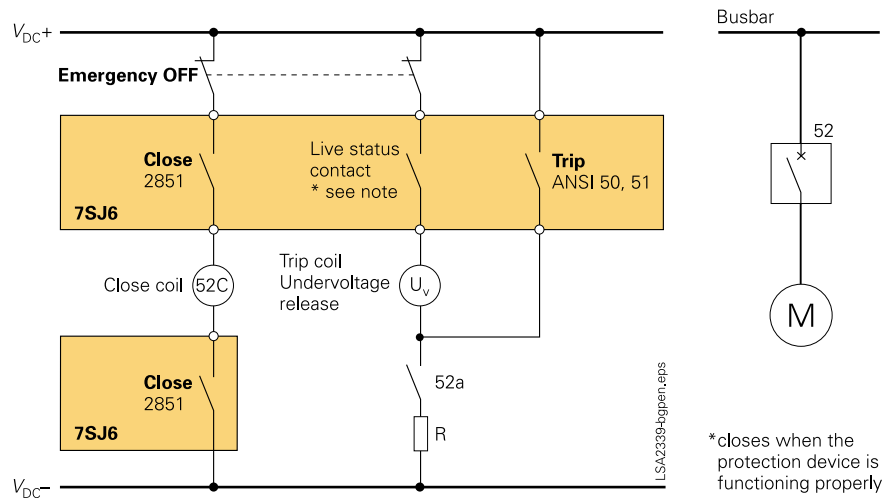
Fig. 5/194   Undervoltage release with make contact 50, 51

In Fig. 5/195 tripping is by failure of auxiliary voltage and by interruption of tripping circuit in the event of network failure. Upon failure of the protection unit, the tripping circuit is also interrupted, since contact held by internal logic drops back into open position.
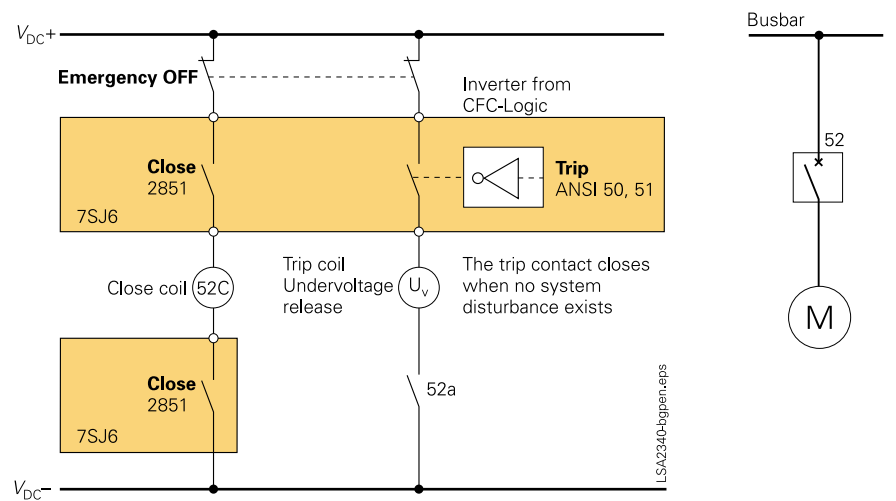
Fig. 5/195   Undervoltage release with locking contact (trip signal 50 is inverted)

Typical applications

Trip circuit supervision (ANSI 74TC)

One or two binary inputs can be used for monitoring the circuit-breaker trip coil including its incoming cables. An alarm signal occurs whenever the circuit is interrupted.

Lockout (ANSI 86)

All binary outputs can be stored like LEDs and reset using the LED reset key. The lockout state is also stored in the event of supply voltage failure. Reclosure can only occur after the lockout state is reset.

Reverse-power protection for dual supply (ANSI 32R)

If power is fed to a busbar through two parallel infeeds, then in the event of any fault on one of the infeeds it should be selectively interrupted. This ensures a continued supply to the busbar through the remaining infeed. For this purpose, directional devices are needed which detect a short-circuit current or a power flow from the busbar in the direction of the infeed. The directional time-overcurrent protection is usually set via the load current. It cannot be used to deactivate low-current faults. Reverse-power protection can be set far below the rated power. This ensures that it also detects power feedback into the line in the event of low-current faults with levels far below the load current. Reverse-power protection is performed via the "flexible protection functions" of the 7SJ64.

Protection indications
511* General trip
2851* CB close command
6852* Trip circuit supervision: Trip relay
6853* Trip circuit supervision: CB aux

52a open, when CB is open
52b open, when CB is closed
BI Binary input

TRIP contact	Breaker	BI1	BI2
open	closed	H	L
open	open	H	H
closed	closed	L	L
closed	open	L	H
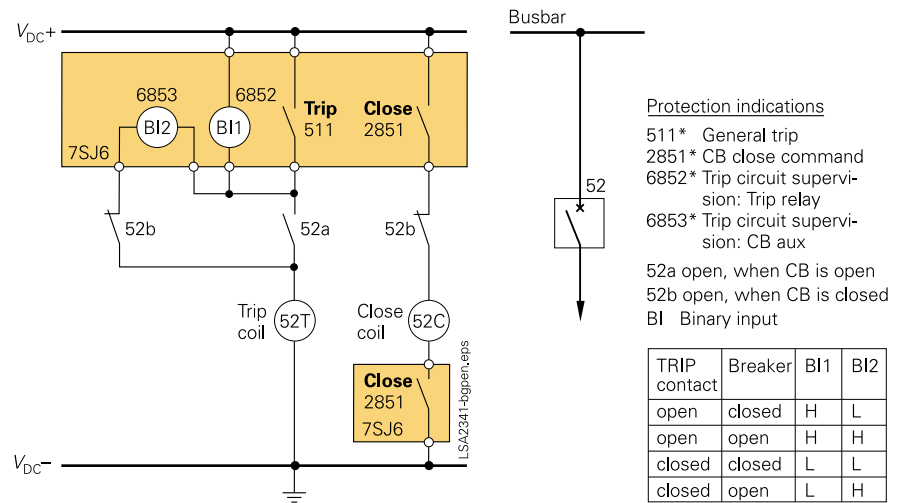
Fig. 5/196 Trip circuit supervision with 2 binary inputs
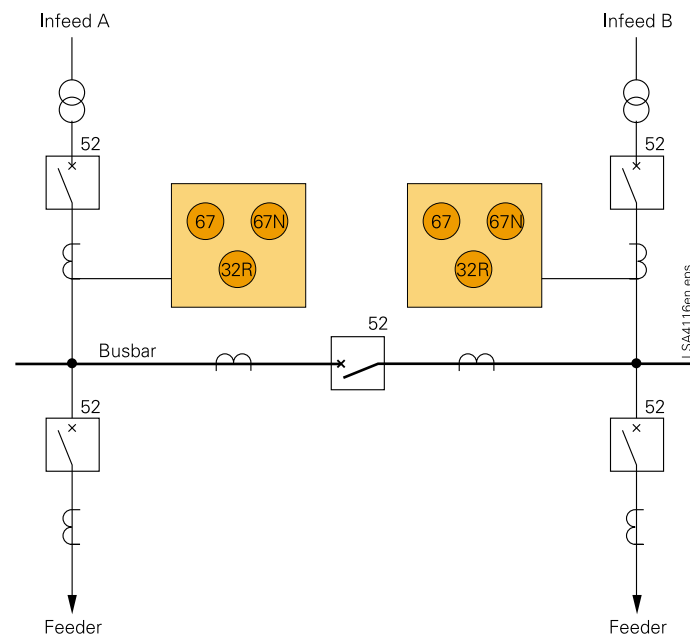
Fig. 5/197 Reverse-power protection for dual supply

Technical data

General unit data

Measuring circuits

System frequency	50 / 60 Hz (settable)

Current transformer

Rated current I_{nom}	1 or 5 A (settable)
Option: sensitive earth-fault CT	$I_{EE} < 1.6$ A
Power consumption	
at $I_{nom} = 1$ A	Approx. 0.05 VA per phase
at $I_{nom} = 5$ A	Approx. 0.3 VA per phase
for sensitive earth-fault CT at 1 A	Approx. 0.05 VA
Overload capability	
Thermal (effective)	$100 \times I_{nom}$ for 1 s
	$30 \times I_{nom}$ for 10 s
	$4 \times I_{nom}$ continuous
Dynamic (impulse current)	$250 \times I_{nom}$ (half cycle)
Overload capability if equipped with sensitive earth-fault CT	
Thermal (effective)	300 A for 1 s
	100 A for 10 s
	15 A continuous
Dynamic (impulse current)	750 A (half cycle)

Voltage transformer

Rated voltage V_{nom}	100 V to 225 V
Measuring range	0 V to 200 V
Power consumption at $V_{nom} = 100$ V	< 0.3 VA per phase
Overload capability in voltage path (phase-neutral voltage)	
Thermal (effective)	230 V continuous

Auxiliary voltage (via integrated converter)

Rated auxiliary voltage V_{aux} DC	24/48	60/125 V	110/250 V
Permissible tolerance DC	19 - 58 V	48 - 150 V	88 - 300 V
Ripple voltage, peak-to-peak	≤ 12 % of rated auxiliary voltage		

Power consumption	7SJ640	7SJ641 7SJ642	7SJ645	7SJ647
Quiescent Approx.	5 W	5.5 W	6.5 W	7.5 W
Energized Approx.	9 W	12.5 W	15 W	21 W

Backup time during loss/short-circuit of auxiliary direct voltage	≥ 50 ms at V > 110 V DC
	≥ 20 ms at V > 24 V DC
Rated auxiliary voltage V_{aux} AC	115 / 230 V
Permissible tolerance AC	92 - 132 V / 184 - 265 V

Power consumption	7SJ640	7SJ641 7SJ642	7SJ645	7SJ647
Quiescent Approx.	7 W	9 W	12 W	16 W
Energized Approx.	12 W	19 W	23 W	33 W

Backup time during loss/short-circuit of auxiliary alternating voltage	≥ 200 ms

Binary inputs/indication inputs

Type	7SJ640	7SJ641	7SJ642	7SJ645	7SJ647
Number (marshallable)	7	15	20	33	48
Voltage range	24 - 250 V DC				
Pickup threshold modifiable by plug-in jumpers					
Pickup threshold DC	19 V DC		88 V DC		
For rated control voltage DC	24/48/60/110/ 125 V DC		110/125/220/250 V DC		
Power consumption energized	0.9 mA (independent of operating voltage) for BI 8…19 / 21…32; 1.8 mA for BI 1…7 / 20/33…48				

Binary outputs/command outputs

Type	7SJ640	7SJ641	7SJ642	7SJ645	7SJ647
Command/indication relay	5	13	8	11	21
Contacts per command/ indication relay	1 NO / form A				
Live status contact	1 NO / NC (jumper)/form A/B				
Switching capacity Make	1000 W / VA				
Break	30 W / VA / 40 W resistive/ 25 W at L/R ≤ 50 ms				
Switching voltage	≤ 250 V DC				
Permissible current	5 A continuous, 30 A for 0.5 s making current, 2000 switching cycles				

Power relay (for motor control)

Type	7SJ640 7SJ641	7SJ642	7SJ645	7SJ647
Number	0	2 (4)	4 (8)	4 (8)
Number of contacts/relay	2 NO / form A			
Switching capacity Make	1000 W / VA at 48 V … 250 V / 500 W at 24 V			
Break	1000 W / VA at 48 V … 250 V / 500 W at 24 V			
Switching voltage	≤ 250 V DC			
Permissible current	5 A continuous, 30 A for 0.5 s			

Technical data

Electrical tests

Specification

Standards	IEC 60255 ANSI C37.90, C37.90.1, C37.90.2, UL508

Insulation tests

Standards	IEC 60255-5; ANSI/IEEE C37.90.0
Voltage test (100 % test) all circuits except for auxiliary voltage and RS485/RS232 and time synchronization	2.5 kV (r.m.s. value), 50/60 Hz
Auxiliary voltage	3.5 kV DC
Communication ports and time synchronization	500 V AC
Impulse voltage test (type test) all circuits, except communication ports and time synchronization, class III	5 kV (peak value); 1.2/50 μs; 0.5 J 3 positive and 3 negative impulses at intervals of 5 s

EMC tests for interference immunity; *type tests*

Standards	IEC 60255-6; IEC 60255-22 (product standard) EN 50082-2 (generic specification) DIN 57435 Part 303
High-frequency test IEC 60255-22-1, class III and VDE 0435 Part 303, class III	2.5 kV (peak value); 1 MHz; τ =15 ms; 400 surges per s; test duration 2 s
Electrostatic discharge IEC 60255-22-2 class IV and EN 61000-4-2, class IV	8 kV contact discharge; 15 kV air gap discharge; both polarities; 150 pF; R_i = 330 Ω
Irradiation with radio-frequency field, non-modulated IEC 60255-22-3 (Report) class III	10 V/m; 27 to 500 MHz
Irradiation with radio-frequency field, amplitude-modulated IEC 61000-4-3; class III	10 V/m, 80 to 1000 MHz; AM 80 %; 1 kHz
Irradiation with radio-frequency field, pulse-modulated IEC 61000-4-3/ENV 50204; class III	10 V/m, 900 MHz; repetition rate 200 Hz, on duration 50 %
Fast transient interference/burst IEC 60255-22-4 and IEC 61000-4-4, class IV	4 kV; 5/50 ns; 5 kHz; burst length = 15 ms; repetition rate 300 ms; both polarities; R_i = 50 Ω; test duration 1 min
High-energy surge voltages (Surge) IEC 61000-4-5; class III Auxiliary voltage	From circuit to circuit: 2 kV; 12 Ω; 9 μF across contacts: 1 kV; 2 Ω ;18 μF
Binary inputs/outputs	From circuit to circuit: 2 kV; 42 Ω; 0.5 μF across contacts: 1 kV; 42 Ω; 0.5 μF
Line-conducted HF, amplitude-modulated IEC 61000-4-6, class III	10 V; 150 kHz to 80 MHz; AM 80 %; 1 kHz
Power frequency magnetic field IEC 61000-4-8, class IV IEC 60255-6	30 A/m; 50 Hz, continuous 300 A/m; 50 Hz, 3 s 0.5 mT, 50 Hz
Oscillatory surge withstand capability ANSI/IEEE C37.90.1	2.5 to 3 kV (peak value), 1 to 1.5 MHz damped wave; 50 surges per s; duration 2 s, R_i = 150 to 200 Ω
Fast transient surge withstand capability ANSI/IEEE C37.90.1	4 to 5 kV; 10/150 ns; 50 surges per s both polarities; duration 2 s, R_i = 80 Ω

Radiated electromagnetic interference ANSI/IEEE C37.90.2	35 V/m; 25 to 1000 MHz; amplitude and pulse-modulated
Damped wave IEC 60694 / IEC 61000-4-12	2.5 kV (peak value, polarity alternating) 100 kHz, 1 MHz, 10 and 50 MHz, R_i = 200 Ω

EMC tests for interference emission; *type tests*

Standard	EN 50081-* (generic specification)
Conducted interferences only auxiliary voltage IEC/CISPR 22	150 kHz to 30 MHz Limit class B
Radio interference field strength IEC/CISPR 11	30 to 1000 MHz Limit class B
Units with a detached operator panel must be installed in a metal cubicle to maintain limit class B	

Mechanical stress tests

Vibration, shock stress and seismic vibration

<u>During operation</u>

Standards	IEC 60255-21 and IEC 60068-2
Vibration IEC 60255-21-1, class 2 IEC 60068-2-6	Sinusoidal 10 to 60 Hz; +/- 0.075 mm ampli- tude; 60 to 150 Hz; 1 *g* acceleration frequency sweep 1 octave/min 20 cycles in 3 perpendicular axes
Shock IEC 60255-21-2, class 1 IEC 60068-2-27	Semi-sinusoidal Acceleration 5 *g*, duration 11 ms; 3 shocks in both directions of 3 axes
Seismic vibration IEC 60255-21-3, class 1 IEC 60068-3-3	Sinusoidal 1 to 8 Hz: ± 3.5 mm amplitude (horizontal axis) 1 to 8 Hz: ± 1.5 mm amplitude (vertical axis) 8 to 35 Hz: 1 *g* acceleration (horizontal axis) 8 to 35 Hz: 0.5 *g* acceleration (vertical axis) Frequency sweep 1 octave/min 1 cycle in 3 perpendicular axes

<u>During transportation</u>

Standards	IEC 60255-21 and IEC 60068-2
Vibration IEC 60255-21-1, class 2 IEC 60068-2-6	Sinusoidal 5 to 8 Hz: ± 7.5 mm amplitude; 8 to 150 Hz: 2 *g* acceleration, frequency sweep 1 octave/min 20 cycles in 3 perpendicular axes
Shock IEC 60255-21-2, Class 1 IEC 60068-2-27	Semi-sinusoidal Acceleration 15 *g*, duration 11 ms 3 shocks in both directions of 3 axes
Continuous shock IEC 60255-21-2, class 1 IEC 60068-2-29	Semi-sinusoidal Acceleration 10 *g*, duration 16 ms 1000 shocks in both directions of 3 axes

Technical data

Climatic stress tests			
Temperatures			
Type-tested acc. to IEC 60068-2-1 and -2, test Bd, for 16 h	-25 °C to +85 °C /-13 °F to +185 °F		
Temporarily permissible operating temperature, tested for 96 h	-20 °C to +70 °C /-4 °F to -158 °F		
Recommended permanent operating temperature acc. to IEC 60255-6 (Legibility of display may be impaired above +55 °C /+131 °F)	-5 °C to +55 °C /+25 °F to +131 °F		
– Limiting temperature during permanent storage	-25 °C to +55 °C /-13 °F to +131 °F		
– Limiting temperature during transport	-25 °C to +70 °C /-13 °F to +158 °F		
Humidity			
Permissible humidity It is recommended to arrange the units in such a way that they are not exposed to direct sunlight or pronounced temperature changes that could cause condensation.	Annual average 75 % relative humidity; on 56 days a year up to 95 % relative humidity; condensation not permissible!		

Unit design			
Type	7SJ640 7SJ642	7SJ641	7SJ645 7SJ647
Housing	7XP20		
Dimensions	See dimension drawings, part 17 of this catalog		
Weight in kg	Housing width 1/3	Housing width 1/2	Housing width 1/1
Surface-mounting housing	8	11	15
Flush-mounting housing	5	6	10
Housing for detached operator panel	–	8	12
Detached operator panel	–	2.5	2.5
Degree of protection acc. to EN 60529			
Surface-mounting housing	IP 51		
Flush-mounting housing	Front: IP 51, rear: IP 20;		
Operator safety	IP 2x with cover		

Serial interfaces	
Operating interface *(front of unit)*	
Connection	Non-isolated, RS232; front panel, 9-pin subminiature connector
Transmission rate	Factory setting 115200 baud, min. 4800 baud, max. 115200 baud
Service/modem interface *(rear of unit)*	
Isolated interface for data transfer	Port C: DIGSI 4/modem/RTD-box
Transmission rate	Factory setting 38400 baud, min. 4800 baud, max. 115200 baud
RS232/RS485	
Connection	
For flush-mounting housing/ surface-mounting housing with detached operator panel	9-pin subminiature connector, mounting location "C"
For surface-mounting housing with two-tier terminal at the top/bottom part	At the bottom part of the housing: shielded data cable
Distance RS232	15 m /49.2 ft
Distance RS485	Max. 1 km/3300 ft
Test voltage	500 V AC against earth
Additional interface *(rear of unit)*	
Isolated interface for data transfer	Port D: RTD-box
Transmission rate	Factory setting 38400 baud, min. 4800 baud, max. 115200 baud
RS485	
Connection	
For flush-mounting housing/ surface-mounting housing with detached operator panel	9-pin subminiature connector, mounting location "D"
For surface-mounting housing with two-tier terminal at the top/bottom part	At the bottom part of the housing: shielded data cable
Distance	Max. 1 km/3300 ft
Test voltage	500 V AC against earth
Fiber optic	
Connection fiber-optic cable	Integrated ST connector for fiber-optic connection
For flush-mounting housing/ surface-mounting housing with detached operator panel	Mounting location "D"
For surface-mounting housing with two-tier terminal at the top/bottom part	At the bottom part of the housing
Optical wavelength	820 nm
Permissible path attenuation	Max. 8 dB, for glass fiber 62.5/125 μm
Distance	Max. 1.5 km/0.9 miles

5

Technical data

System interface (rear of unit)

IEC 60870-5-103 protocol

Isolated interface for data transfer to a control center	Port B
Transmission rate	Factory setting 9600 baud, min. 1200 baud, max. 115200 baud

RS232/RS485

Connection	
For flush-mounting housing/ surface-mounting housing with detached operator panel	Mounting location "B"
For surface-mounting housing with two-tier terminal on the top/bottom part	At the bottom part of the housing: shielded data cable
Distance RS232	Max. 15 m/49 ft
Distance RS485	Max. 1 km/3300 ft
Test voltage	500 V AC against earth

Fiber optic

Connection fiber-optic cable	Integrated ST connector for fiber-optic connection
For flush-mounting housing/ surface-mounting housing with detached operator panel	Mounting location "B"
For surface-mounting housing with two-tier terminal on the top/bottom part	At the bottom part of the housing
Optical wavelength	820 nm
Permissible path attenuation	Max. 8 dB, for glass fiber 62.5/125 μm
Distance	Max. 1.5 km/0.9 miles

IEC 60870-5-103 protocol, redundant

RS485

Connection	
For flush-mounting housing/ surface-mounting housing with detached operator panel	Mounting location "B"
For surface-mounting housing with two-tier terminal on the top/bottom part	(not available)
Distance RS485	Max. 1 km/3300 ft
Test voltage	500 V AC against earth

IEC 61850 protocol

Isolated interface for data transfer: - to a control center - with DIGSI - between SIPROTEC 4 relays	Port B, 100 Base T acc. to IEEE802.3
Transmission rate	100 Mbit

Ethernet, electrical

Connection	
For flush-mounting housing/ surface-mounting housing with detached operator panel	Two RJ45 connectors Mounting location "B"
Distance	Max. 20 m / 65.6 ft
Test voltage	500 V AC against earth

Ethernet, optical

Connection For flush-mounting housing/ surface-mounting housing with detached operator panel	Intergr. ST connector for FO connection Mounting location "B"
Optical wavelength	1300 nmm
Distance	1.5 km/0.9 miles

PROFIBUS-FMS/DP

Isolated interface for data transfer to a control center	Port B
Transmission rate	Up to 1.5 Mbaud

RS485

Connection	
For flush-mounting housing/ surface-mounting housing with detached operator panel	9-pin subminiature connector, mounting location "B"
For surface-mounting housing with two-tier terminal on the top/bottom part	At the bottom part of the housing: shielded data cable
Distance	1000 m/3300 ft ≤ 93.75 kbaud; 500 m/1500 ft ≤ 187.5 kbaud; 200 m/600 ft ≤ 1.5 Mbaud; 100 m/300 ft ≤ 12 Mbaud
Test voltage	500 V AC against earth

Fiber optic

Connection fiber-optic cable	Integr. ST connector for FO connection, mounting location "B"
For flush-mounting housing/ surface-mounting housing with detached operator panel	
For surface-mounting housing with two-tier terminal on the top/bottom part	At the bottom part of the housing Important: Please refer to footnotes [1] and [2] on page 5/215
Optical wavelength	820 nm
Permissible path attenuation	Max. 8 dB, for glass fiber 62.5/125 μm
Distance	500 kB/s 1.6 km/0.99 miles 1500 kB/s 530 m/0.33 miles

MODBUS RTU, ASCII, DNP 3.0

Isolated interface for data transfer to a control center	Port B
Transmission rate	Up to 19200 baud

RS485

Connection	
For flush-mounting housing/ surface-mounting housing with detached operator panel	9-pin subminiature connector, mounting location "B"
For surface-mounting housing with two-tier terminal at the top/bottom part	At bottom part of the housing: shielded data cable
Distance	Max. 1 km/3300 ft max. 32 units recommended
Test voltage	500 V AC against earth

Fiber-optic

Connection fiber-optic cable	Integrated ST connector for fiber-optic connection
For flush-mounting housing/ surface-mounting housing with detached operator panel	Mounting location "B"
For surface-mounting housing with two-tier terminal at the top/bottom part	At the bottom part of the housing Important: Please refer to footnotes [1] and [2] on page 5/215
Optical wavelength	820 nm
Permissible path attenuation	Max 8 dB. for glass fiber 62.5/125 μm
Distance	Max. 1.5 km/0.9 miles

1) At I_{nom} = 1 A, all limits divided by 5.

Technical data

Time synchronization DCF77/IRIG-B signal (Format IRIG-B000)

Connection	9-pin subminiature connector (SUB-D) (terminal with surface-mounting housing)
Voltage levels	5 V, 12 V or 24 V (optional)

Functions

Definite-time overcurrent protection, directional/non-directional (ANSI 50, 50N, 67, 67N)

Operating mode non-directional phase protection (ANSI 50)	3-phase (standard) or 2-phase (L1 and L3)
Number of elements (stages)	$I>$, $I>>$, $I>>>$ (phases) $I_E>$, $I_E>>$, $I_E>>>$ (earth)
Setting ranges	
Pickup phase elements	0.5 to 175 A or ∞ [1] (in steps of 0.01 A)
Pickup earth elements	0.25 to 175 A or ∞ [1] (in steps of 0.01 A)
Delay times T	0 to 60 s or ∞ (in steps of 0.01 s)
Dropout delay time T_{DO}	0 to 60 s (in steps of 0.01 s)
Times	
Pickup times (without inrush restraint, with inrush restraint + 10 ms)	

	Non-directional	Directional
With twice the setting value	Approx. 30 ms	45 ms
With five times the setting value	Approx. 20 ms	40 ms
Dropout times	Approx. 40 ms	

Dropout ratio	Approx. 0.95 for $I/I_{nom} \geq 0.3$
Tolerances	
Pickup	2 % of setting value or 50 mA [1]
Delay times T, T_{DO}	1 % or 10 ms

Inverse-time overcurrent protection, directional/non-directional (ANSI 51, 51N, 67, 67N)

Operating mode non-directional phase protection (ANSI 51)	3-phase (standard) or 2-phase (L1 and L3)
Setting ranges	
Pickup phase element I_P	0.5 to 20 A or ∞ [1] (in steps of 0.01 A)
Pickup earth element I_{EP}	0.25 to 20 A or ∞ [1] (in steps of 0.01 A)
Time multiplier T (IEC characteristics)	0.05 to 3.2 s or ∞ (in steps of 0.01 s)
Time multiplier D (ANSI characteristics)	0.05 to 15 s or ∞ (in steps of 0.01 s)
Undervoltage threshold $V<$ for release I_P	10.0 to 125.0 V (in steps of 0.1 V)
Trip characteristics	
IEC	Normal inverse, very inverse, extremely inverse, long inverse
ANSI	Inverse, short inverse, long inverse moderately inverse, very inverse, extremely inverse, definite inverse
User-defined characteristic	Defined by a maximum of 20 value pairs of current and time delay
Dropout setting	
Without disk emulation	Approx. 1.05 · setting value I_P for $I_P/I_{nom} \geq 0.3$, corresponds to approx. 0.95 · pickup threshold
With disk emulation	Approx. 0.90 · setting value I_P

1) At I_{nom} = 1 A, all limits divided by 5.

Tolerances	
Pickup/dropout thresholds I_P, I_{Ep}	2 % of setting value or 50 mA [1]
Pickup time for $2 \leq I/I_P \leq 20$	5 % of reference (calculated) value + 2 % current tolerance, respectively 30 ms
Dropout ratio for $0.05 \leq I/I_P \leq 0.9$	5 % of reference (calculated) value + 2 % current tolerance, respectively 30 ms

Direction detection

For phase faults

Polarization	With cross-polarized voltages; With voltage memory for measurement voltages that are too low
Forward range Rotation of reference voltage $V_{ref,rot}$	$V_{ref,rot} \pm 86°$ - 180° to 180° (in steps of 1°)
Direction sensitivity	For one and two-phase faults unlimited; For three-phase faults dynamically unlimited; Steady-state approx. 7 V phase-to-phase

For earth faults

Polarization	With zero-sequence quantities $3V_0$, $3I_0$ or with negative-sequence quantities $3V_2$, $3I_2$
Forward range Rotation of reference voltage $V_{ref,rot}$	$V_{ref,rot} \pm 86°$ - 180° to 180° (in steps of 1°)
Direction sensitivity	
Zero-sequence quantities $3V_0$, $3I_0$	$V_E \approx 2.5$ V displacement voltage, measured; $3V_0 \approx 5$ V displacement voltage, calculated
Negative-sequence quantities $3V_2$, $3I_2$	$3V_2 \approx 5$ V negative-sequence voltage; $3I_2 \approx 225$ mA negative-sequence current [1]
Tolerances (phase angle error under reference conditions)	
For phase and earth faults	± 3 ° electrical

Inrush blocking

Influenced functions	Time-overcurrent elements, $I>$, $I_E>$, I_p, I_{Ep} (directional, non-directional)
Lower function limit phases	At least one phase current (50 Hz and 100 Hz) ≥ 125 mA [1]
Lower function limit earth	Earth current (50 Hz and 100 Hz) ≥ 125 mA [1]
Upper function limit (setting range)	1.5 to 125 A [1] (in steps of 0.01 A)
Setting range I_{2f}/I	10 to 45 % (in steps of 1 %)
Crossblock (I_{L1}, I_{L2}, I_{L3})	ON/OFF

Dynamic setting change

Controllable function	Directional and non-directional pickup, tripping time
Start criteria	Current criteria, CB position via aux. contacts, binary input, auto-reclosure ready
Time control	3 timers
Current criteria	Current threshold (reset on dropping below threshold; monitoring with timer)

Technical data

(Sensitive) earth-fault detection (ANSI 64, 50 Ns, 51Ns, 67Ns)

Displacement voltage starting *for all types of earth fault (ANSI 64)*

Setting ranges	
Pickup threshold $V_E>$ (measured)	1.8 to 200 V (in steps of 0.1 V)
Pickup threshold $3V_0>$ (calculated)	10 to 225 V (in steps of 0.1 V)
Delay time $T_{Delay\ pickup}$	0.04 to 320 s or ∞ (in steps of 0.01 s)
Additional trip delay T_{VDELAY}	0.1 to 40000 s or ∞ (in steps of 0.01 s)
Times	
Pickup time	Approx. 50 ms
Dropout ratio	0.95 or (pickup value -0.6 V)
Tolerances	
Pickup threshold V_E (measured)	3 % of setting value or 0.3 V
Pickup threshold $3V_0$ (calculated)	3 % of setting value or 3 V
Delay times	1 % of setting value or 10 ms

Phase detection for earth fault in an unearthed system

Measuring principle	Voltage measurement (phase-to-earth)
Setting ranges	
$V_{ph\ min}$ (earth-fault phase)	10 to 100 V (in steps of 1 V)
$V_{ph\ max}$ (unfaulted phases)	10 to 100 V (in steps of 1 V)
Measuring tolerance acc. to DIN 57435 part 303	3 % of setting value, or 1 V

Earth-fault pickup *for all types of earth faults*
Definite-time characteristic *(ANSI 50Ns)*

Setting ranges	
Pickup threshold $I_{EE}>$, $I_{EE}>>$	
For sensitive input	0.001 to 1.5 A (in steps of 0.001 A)
For normal input	0.25 to 175 A[1] (in steps of 0.01 A)
Delay times T for $I_{EE}>$, $I_{EE}>>$	0 to 320 s or ∞ (in steps of 0.01 s)
Dropout delay time T_{DO}	0 to 60 s (in steps of 0.01 s)
Times	
Pickup times	Approx. 50 ms
Dropout ratio	Approx. 0.95
Tolerances	
Pickup threshold	
For sensitive input	2 % of setting value or 1 mA
For normal input	2 % of setting value or 50 mA[1]
Delay times	1 % of setting value or 20 ms

Earth-fault pickup *for all types of earth faults*
Inverse-time characteristic *(ANSI 51Ns)*

User-defined characteristic	Defined by a maximum of 20 pairs of current and delay time values
Setting ranges	
Pickup threshold I_{EEp}	
For sensitive input	0.001 A to 1.4 A (in steps of 0.001 A)
For normal input	0.25 to 20 A[1] (in steps of 0.01 A)
User defined	
Time multiplier T	0.1 to 4 s or ∞ (in steps of 0.01 s)
Times	
Pickup times	Approx. 50 ms
Pickup threshold	Approx. 1.1 · I_{EEp}
Dropout ratio	Approx. 1.05 · I_{EEp}
Tolerances	
Pickup threshold	
For sensitive input	2 % of setting value or 1 mA
For normal input	2 % of setting value or 50 mA[1]

Note: Due to the high sensitivity the linear range of the measuring input IN with integrated sensitive input transformer is from 0.001 A to 1.6 A. For currents greater than 1.6 A, correct directionality can no longer be guaranteed.

1) For I_{nom} = 1 A, all limits divided by 5.

Delay times in linear range	7 % of reference value for $2 \geq I/I_{EEp}$ ≥ 20 + 2 % current tolerance, or 70 ms
Logarithmic inverse	Refer to the manual
Logarithmic inverse with knee point	Refer to the manual

Direction detection *for all types of earth-faults (ANSI 67Ns)*

Measuring method "cos φ/sin φ"

Direction measurement	I_E and V_E measured or $3I_0$ and $3V_0$ calculated
Measuring principle	Active/reactive power measurement
Setting ranges	
Measuring enable $I_{Release\ direct.}$	
For sensitive input	0.001 to 1.2 A (in steps of 0.001 A)
For normal input	0.25 to 150 A[1] (in steps of 0.01 A)
Direction phasor $\varphi_{Correction}$	- 45 ° to + 45 ° (in steps of 0.1 °)
Dropout delay $T_{Reset\ delay}$	1 to 60 s (in steps of 1 s)
Tolerances	
Pickup measuring enable	
For sensitive input	2 % of setting value or 1 mA
For normal input	2 % of setting value or 50 mA[1]
Angle tolerance	3 °

Measuring method "φ (V_0/I_0)"

Direction measurement	I_E and V_E measured or $3I_0$ and $3V_0$ calculated
Minimum voltage $V_{min.}$ measured	0.4 to 50 V (in steps of 0.1 V)
Minimum voltage $V_{min.}$ calculated	10 to 90 V (in steps of 1 V)
Phase angle φ	-180° to 180° (in steps of 0.1°)
Delta phase angle $\Delta \varphi$	0° to 180° (in steps of 0.1°)
Tolerances	
Pickup threshold V_E (measured)	3 % of setting value or 0.3 V
Pickup threshold $3V_0$ (calculated)	3 % of setting value or 3 V
Angle tolerance	3 °

Angle correction for cable CT

Angle correction F1, F2	0° to 5° (in steps of 0.1°)
Current value $I1$, $I2$	
For sensitive input	0.001 to 1.5 A (in steps of 0.001 A)
For normal input	0.25 to 175 A[1] (in steps of 0.01 A)

High-impedance restricted earth-fault protection *(ANSI 87N) / single-phase overcurrent protection*

Setting ranges	
Pickup thresholds $I>$, $I>>$	
For sensitive input	0.003 to 1.5 A or ∞ (in steps of 0.001 A)
For normal input	0.25 to 175 A[1] or ∞ (in steps of 0.01 A)
Delay times $T_I>$, $T_I>>$	0 to 60 s or ∞ (in steps of 0.01 s)
Times	
Pickup times	
Minimum	Approx. 20 ms
Typical	Approx. 30 ms
Dropout times	Approx. 30 ms
Dropout ratio	Approx. 0.95 for $I/I_{nom} \geq 0.5$
Tolerances	
Pickup thresholds	3 % of setting value or 1 % rated current at I_{nom} = 1 or 5 A; 5 % of setting value or 3 % rated current at I_{nom} = 0.1 A
Delay times	1 % of setting value or 10 ms

Technical data

Intermittent earth-fault protection

Setting ranges

Pickup threshold

For I_E	$I_{IE}>$	0.25 to 175 A[1] (in steps of 0.01 A)
For $3I_0$	$I_{IE}>$	0.25 to 175 A[1] (in steps of 0.01 A)
For I_{EE}	$I_{IE}>$	0.005 to 1.5 A (in steps of 0.001 A)

Pickup prolon-gation time	T_V	0 to 10 s (in steps of 0.01 s)
Earth-fault accu-mulation time	T_{sum}	0 to 100 s (in steps of 0.01 s)
Reset time for accumulation	T_{res}	1 to 600 s (in steps of 1 s)
Number of pickups for intermittent earth fault		2 to 10 (in steps of 1)

Times

Pickup times

Current = 1.25 · pickup value	Approx. 30 ms
Current ≥ 2 · pickup value	Approx. 22 ms
Dropout time	Approx. 22 ms

Tolerances

Pickup threshold $I_{IE}>$	3 % of setting value, or 50 mA[1]
Times T_V, T_{sum}, T_{res}	1 % of setting value or 10 ms

Thermal overload protection (ANSI 49)

Setting ranges

Factor k	0.1 to 4 (in steps of 0.01)
Time constant	1 to 999.9 min (in steps of 0.1 min)
Warning overtemperature $\Theta_{alarm}/\Theta_{trip}$	50 to 100 % with reference to the tripping overtemperature (in steps of 1 %)
Current warning stage I_{alarm}	0.5 to 20 A (in steps of 0.01 A)
Extension factor when stopped k_τ factor	1 to 10 with reference to the time constant with the machine running (in steps of 0.1)

Rated overtemperature (for I_{nom})   40 to 200 °C (in steps of 1 °C)

Tripping characteristic
For $(I/k \cdot I_{nom}) \leq 8$

$$t = \tau_{th} \cdot \ln \frac{\left(I / k \cdot I_{nom}\right)^2 - \left(I_{pre} / k \cdot I_{nom}\right)^2}{\left(I / k \cdot I_{nom}\right)^2 - 1}$$

t	=	Tripping time
τ_{th}	=	Temperature rise time constant
I	=	Load current
I_{pre}	=	Preload current
k	=	Setting factor acc. to VDE 0435 Part 3011 and IEC 60255-8
I_{nom}	=	Rated (nominal) current of the protection relay

Dropout ratios

Θ/Θ_{Trip}	Drops out with Θ_{Alarm}
Θ/Θ_{Alarm}	Approx. 0.99
I/I_{Alarm}	Approx. 0.97

Tolerances

With reference to k · I_{nom}	Class 5 acc. to IEC 60255-8
With reference to tripping time	5 % +/- 2 s acc. to IEC 60255-8

Auto-reclosure (ANSI 79)

Number of reclosures	0 to 9 Shot 1 to 4 individually adjustable

Program for phase fault
Start-up by   Time-overcurrent elements (dir., non-dir.), negative sequence, binary input

1) At I_{nom} = 1 A, all limits divided by 5.

Program for earth fault

Start-up by	Time-overcurrent elements (dir., non-dir.), sensitive earth-fault protection, binary input
Blocking of ARC	Pickup of protection functions, three-phase fault detected by a protective element, binary input, last TRIP command after the reclosing cycle is complete (unsuccessful reclosing), TRIP command by the breaker failure protection (50BF), opening the CB without ARC initiation, external CLOSE command

Setting ranges

Dead time (separate for phase and earth and individual for shots 1 to 4)	0.01 to 320 s (in steps of 0.01 s)
Blocking duration for manual-CLOSE detection	0.5 s to 320 s or 0 (in steps of 0.01 s)
Blocking duration after reclosure	0.5 s to 320 s (in steps of 0.01 s)
Blocking duration after dynamic blocking	0.01 to 320 s (in steps of 0.01 s)
Start-signal monitoring time	0.01 to 320 s or ∞ (in steps of 0.01 s)
Circuit-breaker supervision time	0.1 to 320 s (in steps of 0.01 s)
Max. delay of dead-time start	0 to 1800 s or ∞ (in steps of 0.1 s)
Maximum dead time extension	0.5 to 320 s or ∞ (in steps of 0.01 s)
Action time	0.01 to 320 s or ∞ (in steps of 0.01 s)

The delay times of the following protection function
can be altered individually by the ARC for shots 1 to 4
(setting value $T = T$, non-delayed $T = 0$, blocking $T = \infty$):
$I>>>$, $I>>$, $I>$, I_p, $I_{dir}>>$, $I_{dir}>$, I_{pdir}
$I_E>>>$, $I_E>>$, $I_E>$, I_{Ep}, $I_{Edir}>>$, $I_{Edir}>$, I_{Edir}

Additional functions	Lockout (final trip), delay of dead-time start via binary input (monitored), dead-time extension via binary input (monitored), co-ordination with other protection relays, circuit-breaker monitoring, evaluation of the CB contacts

Breaker failure protection (ANSI 50 BF)

Setting ranges

Pickup thresholds	0.2 to 5 A[1] (in steps of 0.01 A)
Delay time	0.06 to 60 s or ∞ (in steps of 0.01 s)

Times

Pickup times

with internal start	is contained in the delay time
with external start	is contained in the delay time
Dropout times	Approx. 25 ms

Tolerances

Pickup value	2 % of setting value (50 mA)[1]
Delay time	1 % or 20 ms

Synchro- and voltage check (ANSI 25)

Operating modes	• Synchro-check • Asynchronous/synchronous
Additional release conditions	• Live-bus / dead line • Dead-bus / live-line • Dead-bus and dead-line • Bypassing

Technical data

Voltages	
Max. operating voltage V_{max}	20 to 140 V (phase-to-phase) (in steps of 1 V)
Min. operating voltage V_{min}	20 to 125 V (phase-to-phase) (in steps of 1 V)
$V<$ for dead-line / dead-bus check	1 to 60 V (phase-to-phase) (in steps of 1 V)
$V>$ for live-line / live-bus check	20 to 140 V (phase-to-phase) (in steps of 1 V)
Primary rated voltage of transformer $V2_{nom}$	0.1 to 800 kV (in steps of 0.01 kV)
Tolerances	2 % of pickup value or 2 V
Drop-off to pickup ratios	approx. 0.9 ($V>$) or 1.1 ($V<$)

ΔV-measurement	
Voltage difference	0.5 to 50 V (phase-to-phase) (in steps of 1 V)
Tolerance	1 V

Δf-measurement	
Δf-measurement ($f2>f1$; $f2<f1$)	0.01 to 2 Hz (in steps of 0.01 Hz)
Tolerance	15 mHz

$\Delta\alpha$-measurement	
$\Delta\alpha$-measurement ($\alpha2>\alpha1$; $\alpha2>\alpha1$)	2 ° to 80 ° (in steps of 1 °)
Tolerance	2 °
Max. phase displacement	5 ° for $\Delta f \leq 1$ Hz 10 ° for $\Delta f > 1$ Hz

Circuit-breaker operating time	
CB operating time	0.01 to 0.6 s (in steps of 0.01 s)

Threshold ASYN ⇔ SYN	
Threshold synchronous / asynchronous	0.01 to 0.04 Hz (in steps of 0.01 Hz)

Adaptation	
Vector group adaptation by angle	0 ° to 360 ° (in steps of 1 °)
Different voltage transformers V_1/V_2	0.5 to 2 (in steps of 0.01)

Times	
Minimum measuring time	Approx. 80 ms
Max. duration $T_{SYN\ DURATION}$	0.01 to 1200 s; ∞ (in steps of 0.01 s)
Supervision time $T_{SUP\ VOLTAGE}$	0 to 60 s (in steps of 0.01 s)
Closing time of CB $T_{CB\ close}$	0 to 60 s (in steps of 0.01 s)
Tolerance of all timers	1 % of setting value or 10 ms

Measuring values of synchro-check function	
Reference voltage $V1$	In kV primary, in V secondary or in % V_{nom}
Range	10 to 120 % V_{nom}
Tolerance*)	≤1 % of measured value or 0.5 % of V_{nom}
Voltage to be synchronized $V2$	In kV primary, in V secondary or in % V_{nom}
Range	10 to 120 % V_{nom}
Tolerance*)	≤1 % of measured value or 0.5 % of V_{nom}
Frequency of $V1$ and $V2$	$f1$, $f2$ in Hz
Range	$f_N \pm 5$ Hz
Tolerance*)	20 mHz
Voltage difference ($V2 - V1$)	In kV primary, in V secondary or in % V_{nom}
Range	10 to 120 % V_{nom}
Tolerance*)	≤1 % of measured value or 0.5 % of V_{nom}
Frequency difference ($f2 - f1$)	In mHz
Range	$f_N \pm 5$ Hz
Tolerance*)	20 mHz
Angle difference ($\alpha2 - \alpha1$)	In °
Range	0 to 180 °
Tolerance*)	0.5 °

Negative-sequence current detection (ANSI 46)

Definite-time characteristic (ANSI 46-1 and 46-2)

Setting ranges	
Pickup current $I_2>$, $I_2>>$	0.5 to 15 A or ∞ (in steps of 0.01 A)
Delay times	0 to 60 s or ∞ (in steps of 0.01 s)
Dropout delay time T_{DO}	0 to 60 s (in steps of 0.01 s)
Functional limit	All phase currents ≤ 50 A[1]

Times	
Pickup times	Approx. 35 ms
Dropout times	Approx. 35 ms
Dropout ratio	Approx. 0.95 for $I_2 / I_{nom} > 0.3$

Tolerances	
Pickup thresholds	3 % of the setting value or 50 mA[1]
Delay times	1 % or 10 ms

Inverse-time characteristic (ANSI 46-TOC)

Setting ranges	
Pickup current	0.5 to 10 A[1] (in steps of 0.01 A)
Time multiplier T (IEC characteristics)	0.05 to 3.2 s or ∞ (in steps of 0.01 s)
Time multiplier D (ANSI characteristics)	0.5 to 15 s or ∞ (in steps of 0.01 s)
Functional limit	All phase currents ≤ 50 A[1]

Trip characteristics	
IEC	Normal inverse, very inverse, extremely inverse
ANSI	Inverse, moderately inverse, very inverse, extremely inverse
Pickup threshold	Approx. $1.1 \cdot I_{2p}$ setting value

Dropout	
IEC and ANSI (without disk emulation)	Approx. $1.05 \cdot I_{2p}$ setting value, which is approx. $0.95 \cdot$ pickup threshold
ANSI with disk emulation	Approx. $0.90 \cdot I_{2p}$ setting value

Tolerances	
Pickup threshold	3 % of the setting value or 50 mA[1]
Time for $2 \leq M \leq 20$	5 % of setpoint (calculated) +2 % current tolerance, at least 30 ms

Flexible protection functions (ANSI 27, 32, 47, 50, 55, 59, 81R)

Operating modes / measuring quantities	
3-phase	I, I_1, I_2, I_2/I_1, $3I_0$, V, V_1, V_2, $3V_0$, P, Q, $\cos\varphi$
1-phase	I, I_E, $I_{E\ sens.}$, V, V_E, P, Q, $\cos\varphi$
Without fixed phase relation	f, df/dt, binary input
Pickup when	Exceeding or falling below threshold value

Setting ranges	
Current I, I_1, I_2, $3I_0$, I_E	0.15 to 200 A[1] (in steps of 0.01 A)
Current ratio I_2/I_1	15 to 100 % (in steps of 1 %)
Sens. earth curr. $I_{E\ sens.}$	0.001 to 1.5 A (in steps of 0.001 A)
Voltages V, V_1, V_2, $3V_0$	1 to 260 V (in steps of 0.1 V)
Displacement voltage V_E	1 to 200 V (in steps of 0.1 V)
Power P, Q	0.5 to 10000 W (in steps of 0.1 W)
Power factor ($\cos\varphi$)	- 0.99 to + 0.99 (in steps of 0.01)
Frequency $\quad f_N = 50$ Hz	40 to 60 Hz (in steps of 0.01 Hz)
$\qquad\qquad\ f_N = 60$ Hz	50 to 70 Hz (in steps of 0.01 Hz)
Rate-of-frequency change df/dt	0.1 to 20 Hz/s (in steps of 0.01 Hz/s)
Dropout ratio >- stage	1.01 to 3 (in steps of 0.01)
Dropout ratio <- stage	0.7 to 0.99 (in steps of 0.01)
Dropout differential f	0.02 to 1.00 Hz (in steps of 0.01 Hz)
Pickup delay time	0 to 60 s (in steps of 0.01 s)
Trip delay time	0 to 3600 s (in steps of 0.01 s)
Dropout delay time	0 to 60 s (in steps of 0.01 s)

*) With rated frequency.

1) At $I_{nom} = 1$ A, all limits divided by 5.

5

Technical data

Flexible protection functions (ANSI 27, 32, 47, 50, 55, 59, 81R) (cont'd)

Times	
Pickup times	
Current, voltage (phase quantities)	
With 2 times the setting value	Approx. 30 ms
With 10 times the setting value	Approx. 20 ms
Current, voltages (symmetrical components)	
With 2 times the setting value	Approx. 40 ms
With 10 times the setting value	Approx. 30 ms
Power	
Typical	Approx. 120 ms
Maximum (low signals and thresholds)	Approx. 350 ms
Power factor	300 to 600 ms
Frequency	Approx. 100 ms
Rate-of-frequency change with 1.25 times the setting value	Approx. 220 ms
Binary input	Approx. 20 ms
Dropout times	
Current, voltage (phase quantities)	< 20 ms
Current, voltages (symmetrical components)	< 30 ms
Power	
Typical	< 50 ms
Maximum	< 350 ms
Power factor	< 300 ms
Frequency	< 100 ms
Rate-of-frequency change	< 200 ms
Binary input	< 10 ms
Tolerances	
Pickup threshold	
Current	1 % of setting value or 50 mA[1]
Current (symmetrical components)	2 % of setting value or 100 mA[1]
Voltage	1 % of setting value or 0.1 V
Voltage (symmetrical components)	2 % of setting value or 0.2 V
Power	1 % of setting value or 0.3 W
Power factor	2 degrees
Frequency	10 mHz
Rate-of-frequency change	5 % of setting value or 0.05 Hz/s
Times	1 % of setting value or 10 ms

Starting time monitoring for motors (ANSI 48)

Setting ranges	
Motor starting current $I_{STARTUP}$	2.5 to 80 A[1] (in steps of 0.01)
Pickup threshold $I_{MOTOR\ START}$	2 to 50 A[1] (in steps of 0.01)
Permissible starting time $T_{STARTUP,\ COLD\ MOTOR}$	1 to 180 s (in steps of 0.1 s)
Permissible starting time $T_{STARTUP,\ WARM\ MOTOR}$	0.5 to 180 s (in steps of 0.1 s)
Temperature threshold cold motor	0 to 80 % (in steps of 1 %)
Permissible blocked rotor time $T_{BLOCKED-ROTOR}$	0.5 to 120 s or ∞ (in steps of 0.1 s)

Tripping time characteristic
for $I > I_{MOTOR\ START}$

$$t = \left(\frac{I_{STARTUP}}{I} \right)^2 \cdot T_{STARTUP}$$

$I_{STARTUP}$ = Rated motor starting current
I = Actual current flowing
$T_{STARTUP}$ = Tripping time for rated motor starting current
t = Tripping time in seconds

1) At $I_{nom} = 1$ A, all limits divided by 5.

Dropout ratio $I_{MOTOR\ START}$	Approx. 0.95
Tolerances	
Pickup threshold	2 % of setting value or 50 mA[1]
Delay time	5 % or 30 ms

Load jam protection for motors (ANSI 51M)

Setting ranges	
Current threshold for alarm and trip	0.25 to 60 A[1] (in steps of 0.01 A)
Delay times	0 to 600 s (in steps of 0.01 s)
Blocking duration after CLOSE signal detection	0 to 600 s (in steps of 0.01 s)
Tolerances	
Pickup threshold	2 % of setting value or 50 mA[1]
Delay time	1 % of setting value or 10 ms

Restart inhibit for motors (ANSI 66)

Setting ranges	
Motor starting current relative to rated motor current $I_{MOTOR\ START}/I_{Motor\ Nom}$	1.1 to 10 (in steps of 0.1)
Rated motor current $I_{Motor\ Nom}$	1 to 6 A[1] (in steps of 0.01 A)
Max. permissible starting time $T_{Start\ Max}$	1 to 320 s (in steps of 1 s)
Equilibrium time T_{Equal}	0 to 320 min (in steps of 0.1 min)
Minimum inhibit time $T_{MIN.\ INHIBIT\ TIME}$	0.2 to 120 min (in steps of 0.1 min)
Max. permissible number of warm starts	1 to 4 (in steps of 1)
Difference between cold and warm starts	1 to 2 (in steps of 1)
Extension k-factor for cooling simulations of rotor at zero speed $k_{\tau\ at\ STOP}$	0.2 to 100 (in steps of 0.1)
Extension factor for cooling time constant with motor running $k_{\tau\ RUNNING}$	0.2 to 100 (in steps of 0.1)

Restarting limit

$$\Theta_{restart} = \Theta_{rot\ max\ perm} \cdot \frac{n_c - 1}{n_c}$$

$\Theta_{restart}$ = Temperature limit below which restarting is possible
$\Theta_{rot\ max\ perm}$ = Maximum permissible rotor overtemperature (= 100 % in operational measured value $\Theta_{rot}/\Theta_{rot\ trip}$)
n_c = Number of permissible start-ups from cold state

Undercurrent monitoring (ANSI 37)

Signal from the operational measured values	Predefined with programmable logic

Technical data

Temperature monitoring box (ANSI 38)

Temperature detectors	
Connectable boxes	1 or 2
Number of temperature detectors per box	Max. 6
Type of measuring	Pt 100 Ω or Ni 100 Ω or Ni 120 Ω
Mounting identification	"Oil" or "Environment" or "Stator" or "Bearing" or "Other"
Thresholds for indications	
For each measuring detector	
Stage 1	-50 °C to 250 °C (in steps of 1 °C) -58 °F to 482 °F (in steps of 1 °F) or ∞ (no indication)
Stage 2	-50 °C to 250 °C (in steps of 1 °C) -58 °F to 482 °F (in steps of 1 °F) or ∞ (no indication)

Undervoltage protection (ANSI 27)

Operating modes/measuring quantities	
3-phase	Positive phase-sequence voltage or phase-to-phase voltages or phase-to-earth voltages
1-phase	Single-phase phase-earth or phase-phase voltage
Setting ranges	
Pickup thresholds $V<$, $V<<$ dependent on voltage connection and chosen measuring quantity	10 to 120 V (in steps of 1 V) 10 to 210 V (in steps of 1 V)
Dropout ratio r	1.01 to 3 (in steps of 0.01)
Delay times T	0 to 100 s or ∞ (in steps of 0.01 s)
Current Criteria "Bkr Closed I_{MIN}"	0.2 to 5 A[1] (in steps of 0.01 A)
Times	
Pickup times	Approx. 50 ms
Dropout times	As pickup times
Tolerances	
Pickup thresholds	3 % of setting value or 1 V
Times	1 % of setting value or 10 ms

Overvoltage protection (ANSI 59)

Operating modes/measuring quantities	
3-phase	Positive phase-sequence voltage or negative phase-sequence voltage or phase-to-phase voltages or phase-to-earth voltages
1-phase	Single-phase phase-earth or phase-phase voltage
Setting ranges	
Pickup thresholds $V>$, $V>>$ dependent on voltage connection and chosen measuring quantity	40 to 260 V (in steps of 1 V) 40 to 150 V (in steps of 1 V) 2 to 150 V (in steps of 1 V)
Dropout ratio r	0.9 to 0.99 (in steps of 0.01)
Delay times T	0 to 100 s or ∞ (in steps of 0.01 s)
Times	
Pickup times V	Approx. 50 ms
Pickup times V_1, V_2	Approx. 60 ms
Dropout times	As pickup times
Tolerances	
Pickup thresholds	3 % of setting value or 1 V
Times	1 % of setting value or 10 ms

1) At I_{nom} = 1 A, all limits divided by 5.

2) At I_{nom} = 1 A, all limits multiplied with 5.

3) At rated frequency.

Frequency protection (ANSI 81)

Number of frequency elements	4
Setting ranges	
Pickup thresholds for f_{nom} = 50 Hz	40 to 60 Hz (in steps of 0.01 Hz)
Pickup thresholds for f_{nom} = 60 Hz	50 to 70 Hz (in steps of 0.01 Hz)
Dropout differential = |pickup threshold - dropout threshold|	0.02 Hz to 1.00 Hz (in steps of 0.01 Hz)
Delay times	0 to 100 s or ∞ (in steps of 0.01 s)
Undervoltage blocking, with positive-sequence voltage V_1	10 to 150 V (in steps of 1 V)
Times	
Pickup times	Approx. 80 ms
Dropout times	Approx. 75 ms
Dropout	
Ratio undervoltage blocking	Approx. 1.05
Tolerances	
Pickup thresholds	
Frequency	10 mHz
Undervoltage blocking	3 % of setting value or 1 V
Delay times	3 % of the setting value or 10 ms

Fault locator (ANSI 21FL)

Output of the fault distance	In Ω primary or secondary, in km / miles of line length, in % of line length
Starting signal	Trip command, dropout of a protection element, via binary input
Setting ranges	
Reactance (secondary)	0.001 to 1.9 Ω/km[2] (in steps of 0.0001) 0.001 to 3 Ω/mile[2] (in steps of 0.0001)
Tolerances	
Measurement tolerance acc. to VDE 0435, Part 303 for sinusoidal measurement quantities	2.5 % fault location, or 0.025 Ω (without intermediate infeed) for 30 ° ≤ φK ≤ 90 ° and V_K/V_{nom} ≥ 0.1 and I_K/I_{nom} ≥ 1

Additional functions

Operational measured values

Currents I_{L1}, I_{L2}, I_{L3} Positive-sequence component I_1 Negative-sequence component I_2 I_E or $3I_0$	In A (kA) primary, in A secondary or in % I_{nom}
Range	10 to 200 % I_{nom}
Tolerance[3]	1 % of measured value or 0.5 % I_{nom}
Phase-to-earth voltages V_{L1-E}, V_{L2-E}, V_{L3-E} Phase-to-phase voltages V_{L1-L2}, V_{L2-L3}, V_{L3-L1}, V_{SYN}, V_E or V_0 Positive-sequence component V_1 Negative-sequence component V_2	In kV primary, in V secondary or in % V_{nom}
Range	10 to 120 % V_{nom}
Tolerance[3]	1 % of measured value or 0.5 % of V_{nom}
S, apparent power	In kVAr (MVAr or GVAr) primary and in % of S_{nom}
Range	0 to 120 % S_{nom}
Tolerance[3]	1 % of S_{nom} for V/V_{nom} and I/I_{nom} = 50 to 120 %

5

Technical data

Operational measured values (cont'd)

P, active power	With sign, total and phase-segregated in kW (MW or GW) primary and in % S_{nom}
Range	0 to 120 % S_{nom}
Tolerance[1]	1 % of S_{nom} for V/V_{nom} and I/I_{nom} = 50 to 120 % and $\left|\cos\varphi\right|$ = 0.707 to 1 with $S_{nom} = \sqrt{3} \cdot V_{nom} \cdot I_{nom}$
Q, reactive power	With sign, total and phase-segregated in kVAr (MVAr or GVAr)primary and in % S_{nom}
Range	0 to 120 % S_{nom}
Tolerance[1]	1 % of S_{nom} for V/V_{nom} and I/I_{nom} = 50 to 120 % and $\left|\sin\varphi\right|$ = 0.707 to 1 with $S_{nom} = \sqrt{3} \cdot V_{nom} \cdot I_{nom}$
$\cos\varphi$, power factor (p.f.)	Total and phase segregated
Range	- 1 to + 1
Tolerance[1]	2 % for $\left|\cos\varphi\right| \geq 0.707$
Frequency f	In Hz
Range	$f_{nom} \pm 5$ Hz
Tolerance[1]	20 mHz
Temperature overload protection Θ/Θ_{Trip}	In %
Range	0 to 400 %
Tolerance[1]	5 % class accuracy per IEC 60255-8
Temperature restart inhibit $\Theta_L/\Theta_{L\ Trip}$	In %
Range	0 to 400 %
Tolerance[1]	5 % class accuracy per IEC 60255-8
Restart threshold $\Theta_{Restart}/\Theta_{L\ Trip}$	In %
Reclose time $T_{Reclose}$	In min
Currents of sensitive ground fault detection (total, real, and reactive current) I_{EE}, $I_{EE\ real}$, $I_{EE\ reactive}$	In A (kA) primary and in mA secondary
Range	0 mA to 1600 mA
Tolerance[1]	2 % of measured value or 1 mA
RTD-box	See section "Temperature monitoring box"
Synchronism and voltage check	See section "Synchronism and voltage check"

Long-term averages

Time window	5, 15, 30 or 60 minutes
Frequency of updates	Adjustable
Long-term averages of currents of real power of reactive power of apparent power	I_{L1dmd}, I_{L2dmd}, I_{L3dmd}, I_{1dmd} in A (kA) P_{dmd} in W (kW, MW) Q_{dmd} in VAr (kVAr, MVAr) S_{dmd} in VAr (kVAr, MVAr)

Max. / Min. report

Report of measured values	With date and time
Reset, automatic	Time of day adjustable (in minutes, 0 to 1439 min) Time frame and starting time adjustable (in days, 1 to 365 days, and ∞)
Reset, manual	Using binary input, using keypad, via communication
Min./Max. values for current	I_{L1}, I_{L2}, I_{L3}, I_1 (positive-sequence component)
Min./Max. values for voltages	V_{L1-E}, V_{L2-E}, V_{L3-E} V_1 (positive-sequence component) V_{L1-L2}, V_{L2-L3}, V_{L3-L1}
Min./Max. values for power	S, P, Q, $\cos\varphi$, frequency
Min./Max. values for overload protection	Θ/Θ_{Trip}
Min./Max. values for mean values	I_{L1dmd}, I_{L2dmd}, I_{L3dmd} I_1 (positive-sequence component); S_{dmd}, P_{dmd}, Q_{dmd}

Local measured values monitoring

Current asymmetry	I_{max}/I_{min} > balance factor, for $I > I_{balance\ limit}$
Voltage asymmetry	V_{max}/V_{min} > balance factor, for $V > V_{lim}$
Current phase sequence	Clockwise (ABC) / counter-clockwise (ACB)
Voltage phase sequence	Clockwise (ABC) / counter-clockwise (ACB)
Limit value monitoring	Predefined limit values, user-defined expansions via CFC

Fuse failure monitor

For all types of networks	With the option of blocking affected protection functions

Fault recording

Recording of indications of the last 8 power system faults	
Recording of indications of the last 3 power system ground faults	

Time stamping

Resolution for event log (operational annunciations)	1 ms
Resolution for trip log (fault annunciations)	1 ms
Maximum time deviation (internal clock)	0.01 %
Battery	Lithium battery 3 V/1 Ah, type CR 1/2 AA, message "Battery Fault" for insufficient battery charge

Oscillographic fault recording

Maximum 8 fault records saved, memory maintained by buffer battery in case of loss of power supply	
Recording time	Total 20 s Pre-trigger and post-fault recording and memory time adjustable
Sampling rate for 50 Hz Sampling rate for 60 Hz	1 sample/1.25 ms (16 samples/cycle) 1 sample/1.04 ms (16 samples/cycle)

1) At rated frequency.

Technical data

Energy/power

Meter values for power Wp, Wq (real and reactive power demand)	in kWh (MWh or GWh) and kVARh (MVARh or GVARh)
Tolerance[1]	$\leq 2\%$ for $I > 0.5\ I_{nom}$, $V > 0.5\ V_{nom}$ and $\lvert \cos\varphi \rvert$ (p.f.) ≥ 0.707

Statistics

Saved number of trips	Up to 9 digits
Number of automatic reclosing commands (segregated according to 1^{st} and $\geq 2^{nd}$ cycle)	Up to 9 digits

Circuit-breaker wear

Methods	• ΣI^x with x = 1 .. 3 • 2-point method (remaining service life) • $\Sigma i^2 t$
Operation	Phase-selective accumulation of measured values on TRIP command, up to 8 digits, phase-selective limit values, monitoring indication

Motor statistics

Total number of motor start-ups	0 to 9999	(resolution 1)
Total operating time	0 to 99999 h	(resolution 1 h)
Total down-time	0 to 99999 h	(resolution 1 h)
Ratio operating time/down-time	0 to 100 %	(resolution 0.1 %)
Active energy and reactive energy	See operational measured values	
Motor start-up data:	Of the last 5 start-ups	
– Start-up time	0.30 s to 9999.99 s	(resolution 10 ms)
– Start-up current (primary)	0 A to 1000 kA	(resolution 1 A)
– Start-up voltage (primary)	0 V to 100 kV	(resolution 1 V)

Operating hours counter

Display range	Up to 7 digits
Criterion	Overshoot of an adjustable current threshold (BkrClosed I_{MIN})

Trip circuit monitoring

With one or two binary inputs

Commissioning aids

Phase rotation field check, operational measured values, circuit-breaker / switching device test, creation of a test measurement report

Clock

Time synchronization	DCF77/IRIG-B signal (telegram format IRIG-B000), binary input, communication

Setting group switchover of the function parameters

Number of available setting groups	4 (parameter group A, B, C and D)
Switchover performed	Via keypad, DIGSI, system (SCADA) interface or binary input

Control

Number of switching units	Depends on the binary inputs and outputs
Interlocking	Programmable
Circuit-breaker signals	Feedback, close, open, intermediate position
Control commands	Single command / double command 1, 1 plus 1 common or 2 trip contacts
Programmable controller	CFC logic, graphic input tool
Local control	
Units with small display	Control via menu, assignment of a function key
Units with large display	Control via menu, control with control keys
Remote control	Via communication interfaces, using a substation automation and control system (e.g. SICAM), DIGSI 4 (e.g. via modem)

CE conformity

This product is in conformity with the Directives of the European Communities on the harmonization of the laws of the Member States relating to electromagnetic compatibility (EMC Council Directive 89/336/EEC) and electrical equipment designed for use within certain voltage limits (Council Directive 73/23/EEC).

This unit conforms to the international standard IEC 60255, and the German standard DIN 57435/Part 303 (corresponding to VDE 0435/Part 303).

Further applicable standards: ANSI/IEEE C37.90.0 and C37.90.1.

The unit conforms to the international standard IEC 60255, and the German standard DIN 57435/Part 303 (corresponding to VDE 0435/Part 303).

This conformity is the result of a test that was performed by Siemens AG in accordance with Article 10 of the Council Directive complying with the generic standards EN 50081-2 and EN 50082-2 for the EMC Directive and standard EN 60255-6 for the "low-voltage Directive".

1) At rated frequency.

Selection and ordering data	Description	Order No.

7SJ64 multifunction protection relay with synchronization   7SJ64☐☐ – ☐☐☐☐☐ – ☐☐☐☐

see next page

Housing, binary inputs and outputs

Housing 1/3 19", 7 BI, 5 BO, 1 live status contact, text display 4 x 20 character (only for 7SJ640) 9th position only with: *B, D, E*	0
Housing 1/2 19", 15 BI, 13 BO (1 NO/NC or 1a/b contact), 1 live status contact, graphic display	1
Housing 1/2 19", 20 BI, 8 BO, 4 (2) power relays, 1 live status contact, graphic display	2
Housing 1/1 19", 33 BI, 11 BO, 8 (4) power relays, 1 live status contact, graphic display	5
Housing 1/1 19", 48 BI, 21 BO, 8 (4) power relays, 1 live status contact, graphic display	7

Measuring inputs (4 x V, 4 x I)

I_{ph} = 1 A[1], I_e = 1 A[1] (min. = 0.05 A) Position 15 only with *A, C, E, G*	1
I_{ph} = 1 A[1], I_e = sensitive (min. = 0.001 A) Position 15 only with *B, D, F, H*	2
I_{ph} = 5 A[1], I_e = 5 A[1] (min. = 0.25 A) Position 15 only with *A, C, E, G*	5
I_{ph} = 5 A[1], I_e = sensitive (min. = 0.001 A) Position 15 only with *B, D, F, H*	6
I_{ph} = 5 A[1], I_e = 1 A[1] (min. = 0.05 A) Position 15 only with *A, C, E, G*	7

Rated auxiliary voltage (power supply, binary inputs)

24 to 48 V DC, threshold binary input 19 V DC[3]	2
60 to 125 V DC[2], threshold binary input 19 V DC[3]	4
110 to 250 V DC[2], 115 to 230 V AC, threshold binary input 88 V DC[3]	5

Unit version

Surface-mounting housing, plug-in terminals, detached operator panel, panel mounting in low-voltage housing	A
Surface-mounting housing, 2-tier terminals on top/bottom	B
Surface-mounting housing, screw-type terminals (direct connection/ ring-type cable lugs), detached operator panel, panel mounting in low-voltage housing	C
Flush-mounting housing, plug-in terminals (2/3 pin connector)	D
Flush-mounting housing, screw-type terminals (direct connection/ring-type cable lugs)	E
Surface-mounting housing, screw-type terminals (direct connection/ring-type cable lugs), without operator panel, panel mounting in low-voltage housing	F
Surface-mounting housing, plug-in terminals, without operator panel, panel mounting in low-voltage housing	G

Region-specific default settings/function versions and language settings

Region DE, 50 Hz, IEC, language: German (language selectable)	A
Region World, 50/60 Hz, IEC/ANSI, language: English (GB) (language selectable)	B
Region US, 60 Hz, ANSI, language: English (US) (language selectable)	C
Region FR, 50/60 Hz, IEC/ANSI, language: French (language selectable)	D
Region World, 50/60 Hz, IEC/ANSI, language: Spanish (language selectable)	E
Region IT, 50/60 Hz, IEC/ANSI, language: Italian (language selectable)	F

1) Rated current can be selected by means of jumpers

2) Transition between the two auxiliary voltage ranges can be selected by means of jumpers.

3) The binary input thresholds can be selected per binary input by means of jumpers.

Selection and ordering data

Description	Order No.	Order code

7SJ64 multifunction protection relay with synchronization   7SJ64☐☐ – ☐☐☐☐☐ – ☐☐☐☐   ☐☐☐

System interface (on rear of unit, Port B)

Description	Code
No system interface	0
IEC 60870-5-103 protocol, RS232	1
IEC 60870-5-103 protocol, RS485	2
IEC 60870-5-103 protocol, 820 nm fiber, ST connector	3
PROFIBUS-FMS Slave, RS485	4
PROFIBUS-FMS Slave, 820 nm wavelength, single ring, ST connector [1]	5
PROFIBUS-FMS Slave, 820 nm wavelength, double ring, ST connector [1]	6

see following pages

Description	Order No.	Order code
PROFIBUS-DP Slave, RS485	9	L 0 A
PROFIBUS-DP Slave, 820 nm wavelength, double ring, ST connector [1]	9	L 0 B
MODBUS, RS485	9	L 0 D
MODBUS, 820 nm wavelength, ST connector [2]	9	L 0 E
DNP 3.0, RS485	9	L 0 G
DNP 3.0, 820 nm wavelength, ST connector [2]	9	L 0 H
IEC 60870-5-103 protocol, redundant, RS485, RJ45 connector [2]	9	L 0 P
IEC 61850, 100 Mbit Ethernet, electrical, double, RJ45 connector (EN 100)	9	L 0 R
IEC 61850, 100 Mbit Ethernet, optical, double, ST connector (EN 100) [2]	9	L 0 S

Only Port C (service interface)

Description	Code
DIGSI 4/modem, electrical RS232	1
DIGSI 4/modem/RTD-box[3], electrical RS485	2

Port C and D (service and additional interface)   9   M ☐ ☐

Port C (service interface)

Description	Code
DIGSI 4/modem, electrical RS232	1
DIGSI 4/modem/RTD-box[3], electrical RS485	2

Port D (additional interface)

Description	Code
RTD-box[3], 820 nm fiber, ST connector [4]	A
RTD-box[3], electrical RS485	F

Measuring/fault recording

Description	Code
Fault recording	1
Slave pointer, mean values, min/max values, fault recording	3

1) Not with position 9 = "*B*"; if 9 = "*B*", please order 7SJ6 unit with RS485 port and separate fiber-optic converters.
   For single ring, please order converter 6GK1502-2CB10, not available with position 9 = "*B*".
   For double ring, please order converter 6GK1502-3CB10, not available with position 9 = "*B*".
   The converter requires a 24 V AC power supply (e.g. power supply 7XV5810-0BA00).

2) Not available with position 9 = "*B*".

3) Temperature monitoring box 7XV5662-☐AD10, refer to "Accessories".

4) When using the RTD-box at an optical interface, the additional RS485 fiber-optic converter 7XV5650-0☐A00 is required.

5

Description				Order No.
7SJ64 multifunction protection relay with synchronization				*7SJ64☐☐ – ☐☐☐☐☐ – ☐☐☐☐*

Designation			ANSI No.	Description		
Basic version				Control		
			50/51	Time-overcurrent protection $I>$, $I>>$, $I>>>$, I_P		
			50N/51N	Earth-fault protection $I_E>$, $I_E>>$, $I_E>>>$, I_{Ep}		
			50N/51N	Insensitive earth-fault protection through IEE function: $I_{EE}>$, $I_{EE}>>$, I_{EEp} [1]		
			50/50N	Flexible protection functions (index quantities derived from current): Additional time-overcurrent protection stages $I_2>$, $I>>>>$, $I_E>>>>$		
			51 V	Voltage-dependent inverse-time overcurrent protection		
			49	Overload protection (with 2 time constants)		
			46	Phase balance current protection (negative-sequence protection)		
			37	Undercurrent monitoring		
			47	Phase sequence		
			59N/64	Displacement voltage		
			50BF	Breaker failure protection		
			74TC	Trip circuit supervision; 4 setting groups, cold-load pickup; inrush blocking		
			86	Lockout	F	A
■		*V, P, f*	27/59	Under-/overvoltage		
			81 O/U	Under-/overfrequency		
			27/47/59(N)	Flexible protection (index quantities derived from		
			32/55/81R	current and voltages): Voltage, power, p.f., rate-of-frequency-change protection	F	E
■		IEF *V, P, f*	27/59	Under-/overvoltage		
			81 O/U	Under-/overfrequency		
			27/47/59(N)	Flexible protection (index quantities derived from		
			32/55/81R	current and voltages): Voltage, power, p.f., rate-of-frequency-change protection		
				Intermittent earth fault	P	E
■	Dir		67/67N	Direction determination for overcurrent, phases and earth	F	C
■	Dir	*V, P, f*	67/67N	Direction determination for overcurrent, phases and earth		
			27/59	Under-/overvoltage		
			81O/U	Under-/overfrequency		
			27/47/59(N)	Flexible protection (index quantities derived from		
			32/55/81R	current and voltages): Voltage, power, p.f., rate-of-frequency-change protection	F	G
■	Dir	IEF	67/67N	Direction determination for overcurrent, phases and earth; intermittent earth fault	P	C
Directional earth-fault detection	Dir		67/67N	Direction determination for overcurrent, phases and earth		
			67Ns	Directional sensitive earth-fault detection		
■			87N	High-impedance restricted earth fault	F	D [2]
Directional earth-fault detection		*V, P, f*	67Ns	Directional sensitive earth-fault detection		
			87N	High-impedance restricted earth fault		
			27/59	Under-/overvoltage		
■			81O/U	Under-/overfrequency		
			27/47/59(N)	Flexible protection (index quantities derived from		
			32/55/81R	current and voltages): Voltage, power, p.f., rate-of-frequency-change protection	F	F [2]
Directional earth-fault detection	Dir	IEF	67/67N	Direction determination for overcurrent, phases and earth		
			67Ns	Directional sensitive earth-fault detection		
■			87N	High-impedance restricted earth fault		
				Intermittent earth fault	P	D [2]

■ Basic version included

V, P, f = Voltage, power, frequency protection
Dir = Directional overcurrent protection
IEF = Intermittent earth fault

1) Only with insensitive earth-current transformer when position 7 = *1, 5, 7*.

2) For isolated/compensated networks only with sensitive earth-current transformer when position 7 = *2, 6*.

5

Description				Order No.
7SJ64 multifunction protection relay with synchronization				*7SJ64☐☐ – ☐☐☐☐☐ – ☐☐☐☐*

Designation			ANSI No.	Description
Basic version				Control
			50/51	Time-overcurrent protection $I>$, $I>>$, $I>>>$, I_P
			50N/51N	Earth-fault protection $I_E>$, $I_E>>$, $I_E>>>$, I_{Ep}
			50N/51N	Insensitive earth-fault protection via IEE function: $I_{EE}>$, $I_{EE}>>$, I_{EEp} [1]
			50/50N	Flexible protection functions (index quantities derived from current): Additional time-overcurrent protection stages $I_2>$, $I>>>>$, $I_E>>>>$
			51 V	Voltage-dependent inverse-time overcurrent protection
			49	Overload protection (with 2 time constants)
			46	Phase balance current protection (negative-sequence protection)
			37	Undercurrent monitoring
			47	Phase sequence
			59N/64	Displacement voltage
			50BF	Breaker failure protection
			74TC	Trip circuit supervision, 4 setting groups, cold-load pickup, inrush blocking
			86	Lockout
Directional earth-fault detection ■			67Ns 87N	Directional sensitive earth-fault detection, High-impedance restricted earth fault *F B* [2]
Directional earth-fault detection ■	Motor	*V, P, f*	67Ns 87N 48/14 66/86 51M 27/59 81O/U 27/47/59(N) 32/55/81R	Directional sensitive earth-fault detection, High-impedance restricted earth fault Starting time supervision, locked rotor Restart inhibit Load jam protection, motor statistics Under-/overvoltage Under-/overfrequency Flexible protection (index quantities derived from current and voltages): Voltage, power, p.f., rate-of-frequency-change protection *H F* [2]
Directional earth-fault detection	Motor Dir	*V, P, f*	67/67N 67Ns 87N 48/14 66/86 51M 27/59 81O/U 27/47/59(N) 32/55/81R	Direction determination for overcurrent, phases and earth Directional sensitive earth-fault detection High-impedance restricted earth fault Starting time supervision, locked rotor Restart inhibit Load jam protection, motor statistics Under-/overvoltage Under-/overfrequency Flexible protection (index quantities derived from current and voltages): Voltage, power, p.f., rate-of-frequency-change protection *H H* [2]
Directional earth-fault detection ■	Motor Dir	IEF *V, P, f*	67/67N 67Ns 87N 48/14 66/86 51M 27/59 81O/U 27/47/59(N) 32/55/81R	Direction determination for overcurrent, phases and earth Directional sensitive earth-fault detection High-impedance restricted earth fault Intermittent earth fault Starting time supervision, locked rotor Restart inhibit Load jam protection, motor statistics Undervoltage/overvoltage Underfrequency/overfrequency Flexible protection (index quantities derived from current and voltages): Voltage, power, p.f., rate-of-frequency-change protection *R H* [2]

■ Basic version included

V, P, f = Voltage, power, frequency protection
Dir = Directional overcurrent protection
IEF = Intermittent earth fault

1) Only with insensitive earth-current transformer when position 7 = *1, 5, 7*.

2) For isolated/compensated networks only with sensitive earth-current transformer when position 7 = *2, 6*.

Selection and ordering data

Description				Order No.		Order code
7SJ64 multifunction protection relay with synchronization				*7SJ64☐☐ – ☐☐☐☐☐ – ☐☐☐☐ – ☐☐☐☐*		

Designation		ANSI No.	Description		Order code
Basic version			Control		
		50/51	Time-overcurrent protection $I>$, $I>>$, $I>>>$, I_p		
		50N/51N	Earth-fault protection $I_E>$, $I_E>>$, $I_E>>>$, I_{Ep}		
		50N/51N	Insensitive earth-fault protection via IEE function: $I_{EE}>$, $I_{EE}>>$, I_{EEp}[1]		
		50/50N	Flexible protection functions (index quantities derived from current): Additional time-overcurrent protection stages $I_2>$, $I>>>>$, $I_E>>>>$		
		51 V	Voltage-dependent inverse-time overcurrent protection		
		49	Overload protection (with 2 time constants)		
		46	Phase balance current protection (negative-sequence protection)		
		37	Undercurrent monitoring		
		47	Phase sequence		
		59N/64	Displacement voltage		
		50BF	Breaker failure protection		
		74TC	Trip circuit supervision		
			4 setting groups, cold-load pickup		
			Inrush blocking		
		86	Lockout		
■ Motor Dir	*V, P, f*	67/67N	Direction determination for overcurrent, phases and earth		
		48/14	Starting time supervision, locked rotor		
		66/86	Restart inhibit		
		51M	Load jam protection, motor statistics		
		27/59	Under-/overvoltage		
		81O/U	Under-/overfrequency		
		27/47/59(N) 32/55/81R	Flexible protection (index quantities derived from current and voltages): Voltage, power, p.f., rate-of-frequency-change protection		*H G*
■ Motor		48/14	Starting time supervision, locked rotor		
		66/86	Restart inhibit		
		51M	Load jam protection, motor statistics		*H A*
ARC, fault locator, synchronization					
		Without			*0*
		79	With auto-reclosure		*1*
		21FL	With fault locator		*2*
		79, 21FL	With auto-reclosure, with fault locator		*3*
		25	With synchronization		*4*
		25, 79, 21FL	With synchronization, auto-reclosure, fault locator		*7*
ATEX100 Certification					
For protection of explosion-protected motos (increased-safety type of protection "e")					*Z X 9 9*[2]

1) Only with insensitive earth-current transformer when position 7 = *1, 5, 7*.

2) This variant might be supplied with a previous firmware version.

Accessories	Description	Order No.

DIGSI 4

Software for configuration and operation of Siemens protection units
running under MS Windows 2000/XP Professional Edition

Basis	Full version with license for 10 computers, on CD-ROM (authorization by serial number)	*7XS5400-0AA00*
Professional	DIGSI 4 Basis and additionally SIGRA (fault record analysis), CFC Editor (logic editor), Display Editor (editor for default and control displays) and DIGSI 4 Remote (remote operation)	*7XS5402-0AA00*

Professional + IEC 61850
Complete version:
DIGSI 4 Basis and additionally SIGRA (fault record analysis),
CFC Editor (logic editor), Display Editor (editor for default
and control displays) and DIGSI 4 Remote (remote operation)
+ IEC 61850 system configurator   *7XS5403-0AA00*

IEC 61850 System configurator

Software for configuration of stations with IEC 61850 communication under
DIGSI, running under MS Windows 2000 or XP Professional Edition
Optional package for DIGSI 4 Basis or Professional
License for 10 PCs. Authorization by serial number. On CD-ROM   *7XS5460-0AA00*

SIGRA 4

Software for graphic visualization, analysis and evaluation of fault records.
Can also be used for fault records of devices of other manufacturers (Comtrade
format). Running under MS Windows 2000 or XP Professional Edition.
(generally contained in DIGSI Professional, but can be ordered additionally)
Authorization by serial number. On CD-ROM.   *7XS5410-0AA00*

Temperature monitoring box

24 to 60 V AC/DC	*7XV5662-2AD10*
90 to 240 V AC/DC	*7XV5662-5AD10*

Varistor/Voltage Arrester

Voltage arrester for high-impedance REF protection

125 Vrms; 600 A; 1S/S 256	*C53207-A401-D76-1*
240 Vrms; 600 A; 1S/S 1088	*C53207-A401-D77-1*

Connecting cable

Cable between PC/notebook (9-pin con.) and protection unit (9-pin connector)
(contained in DIGSI 4, but can be ordered additionally)   *7XV5100-4*

Cable between temperature monitoring box and SIPROTEC 4 unit

- length 5 m /16.4 ft	*7XV5103-7AA05*
- length 25 m /82 ft	*7XV5103-7AA25*
- length 50 m /164 ft	*7XV5103-7AA50*

Manual for 7SJ64

English	*C53000-G1140-C20 7-x* [1]

[1] x = please inquire for latest edition (exact Order No.).

Accessories

Mounting rail

2-pin
connector

3-pin
connector

Short-circuit links
for current termi-
nals

Short-circuit links
for other terminals

Description	Order No.	Size of package	Supplier
Terminal safety cover			
Voltage/current terminal 18-pole/12-pole	C73334-A1-C31-1	1	Siemens
Voltage/current terminal 12-pole/8-pole	C73334-A1-C32-1	1	Siemens
Connector 2-pin		1	Siemens
Connector 3-pin	C73334-A1-C36-1	1	Siemens
Crimp connector CI2 0.5 to 1 mm^2	0-827039-1	4000 taped on reel	AMP [1]
Crimp connector CI2 0.5 to 1 mm^2	0-827396-1	1	AMP [1]
Crimp connector: Type III+ 0.75 to 1.5 mm^2	0-163084-2	1	AMP [1]
Crimp connector: Type III+ 0.75 to 1.5 mm^2	0-163083-7	4000 taped on reel	AMP [1]
Crimping tool for Type III+	0-539635-1	1	AMP [1]
and matching female	0-539668-2	1	AMP [1]
Crimping tool for CI2	0-734372-1	1	AMP [1]
and matching female	1-734387-1	1	AMP [1]
Short-circuit links			
for current terminals	C73334-A1-C33-1	1	Siemens
for other terminals	C73334-A1-C34-1	1	Siemens
Mounting rail for 19" rack	C73165-A63-D200-1	1	Siemens

[1] Your local Siemens representative
can inform you on local suppliers.

Connection diagram

Housing for panel surface mounting

Housing for flush mounting

7SJ640

7SJ640x-x B xxx-xxxx
7SJ640x-x D xxx-xxxx
E

15	Q1	I_{L1}
30	Q2	
14	Q3	I_{L2}
29	Q4	
13	Q5	I_{L3}
28	Q6	
12	Q7	$3I_0, I_E$
27	Q8	
45	R15	V_{L1}
44	R17	V_{L2}
60	R18	V_{L3}
59	R16	
26	R13	V_4
25	R14	
37	F5	BI1
36	F6	BI2
35	F7	BI3
34	F8	BI4
33	F9	BI5
52	F10	
54	R9	BI6
39	R10	
53	R11	BI7
38	R12	

Front port

BO1	R1	43
BO2	R2	58
BO3	R3	42
	R4	57
BO4	R5	56
	R6	41
BO5	R7	55
	R8	40

Live status contact — F3 | 31
F4 | 32

Power supply — F1 | 10
F2 | 11

Additional interface — D — *)

Service interface — C — *)

System interface — B — *)

Time synchronization — A — *)

Earth at housing wall

16 (Earthing terminal)

LSA2818-cgpen.eps

Fig. 5/198
7SJ640 connection diagram

*) For pinout of communication ports
see part 17 of this catalog.
For allocation of terminals of the panel surface mounting version
refer to the manual (http://www.siprotec.com).
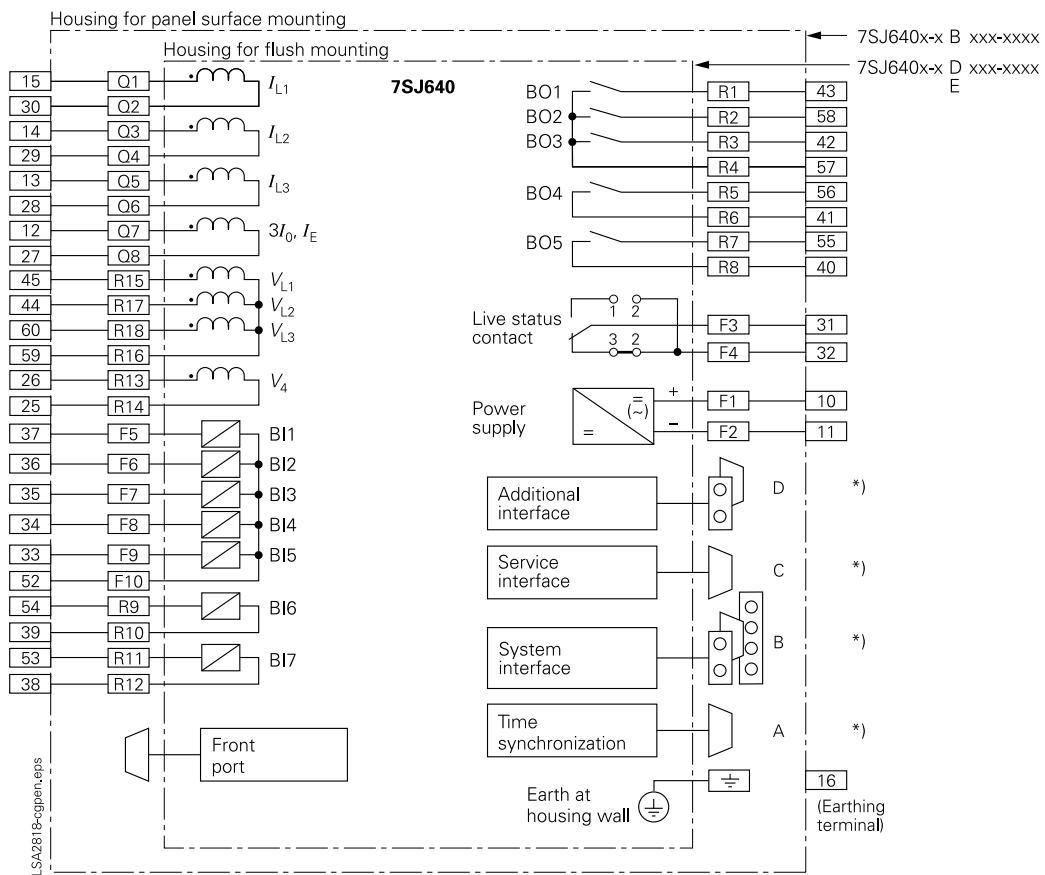
Connection diagram

Fig. 5/199
7SJ641 connection diagram

*) For pinout of communication ports
   see part 17 of this catalog.
   For allocation of terminals of the panel surface mounting version
   refer to the manual (http://www.siprotec.com).

Connection diagram

Housing for panel surface mounting

Housing for surface mounting/flush mounting

7SJ642

25	Q1	I_{L1}
50	Q2	
24	Q3	I_{L2}
49	Q4	
23	Q5	I_{L3}
48	Q6	
22	Q7	$3I_0, I_E$
47	Q8	
20	R15	V_{L1}
19	R17	V_{L2}
44	R18	V_{L3}
45	R16	
21	R13	V_4
46	R14	

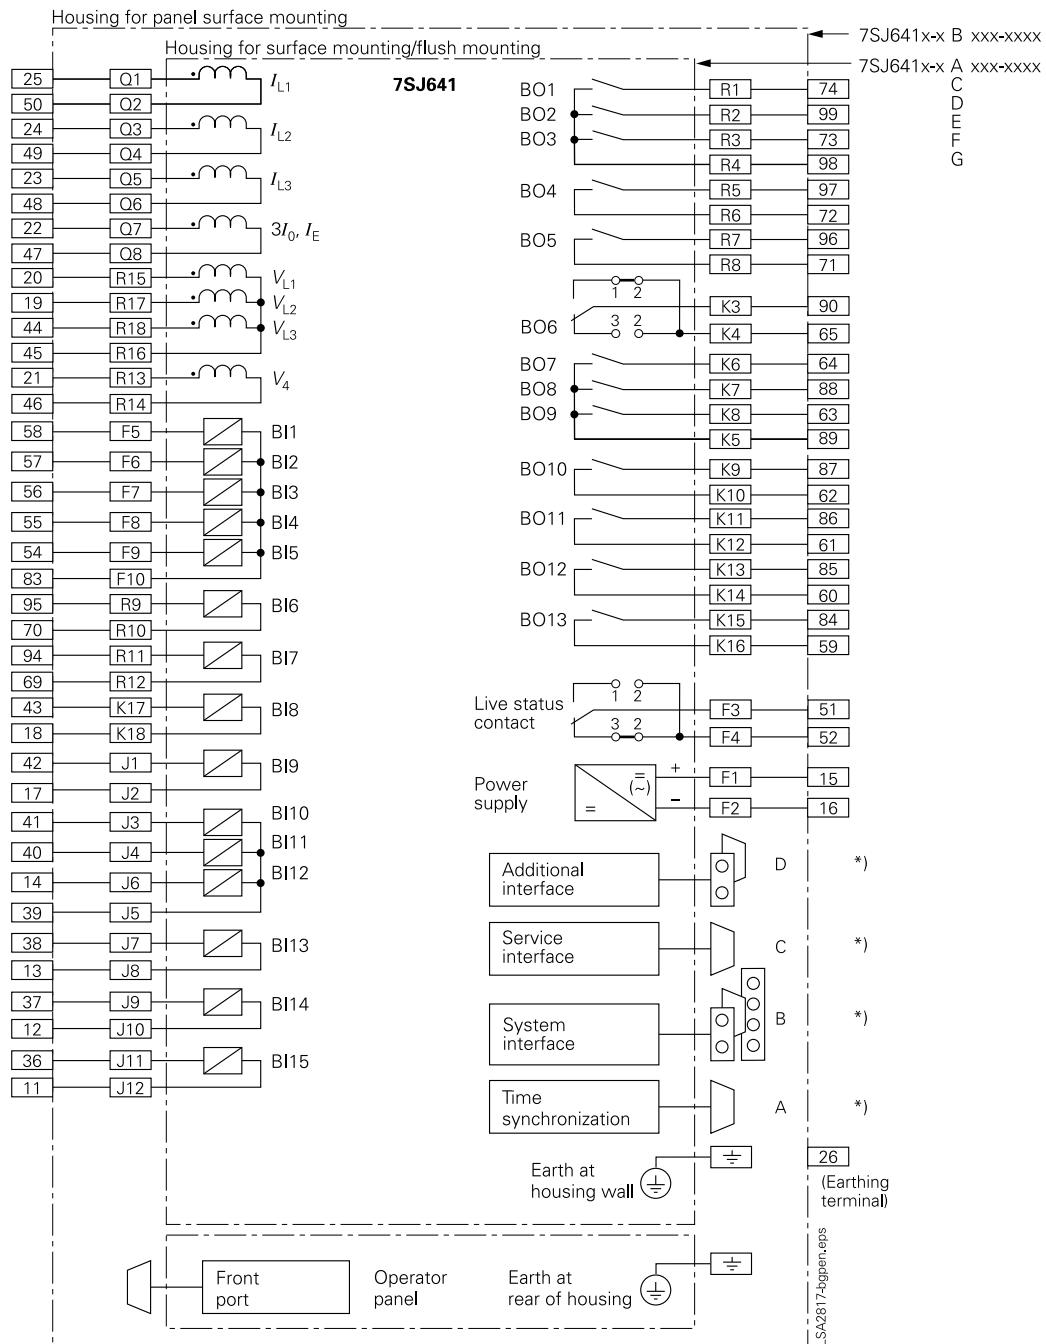7SJ642x-x B xxx-xxxx
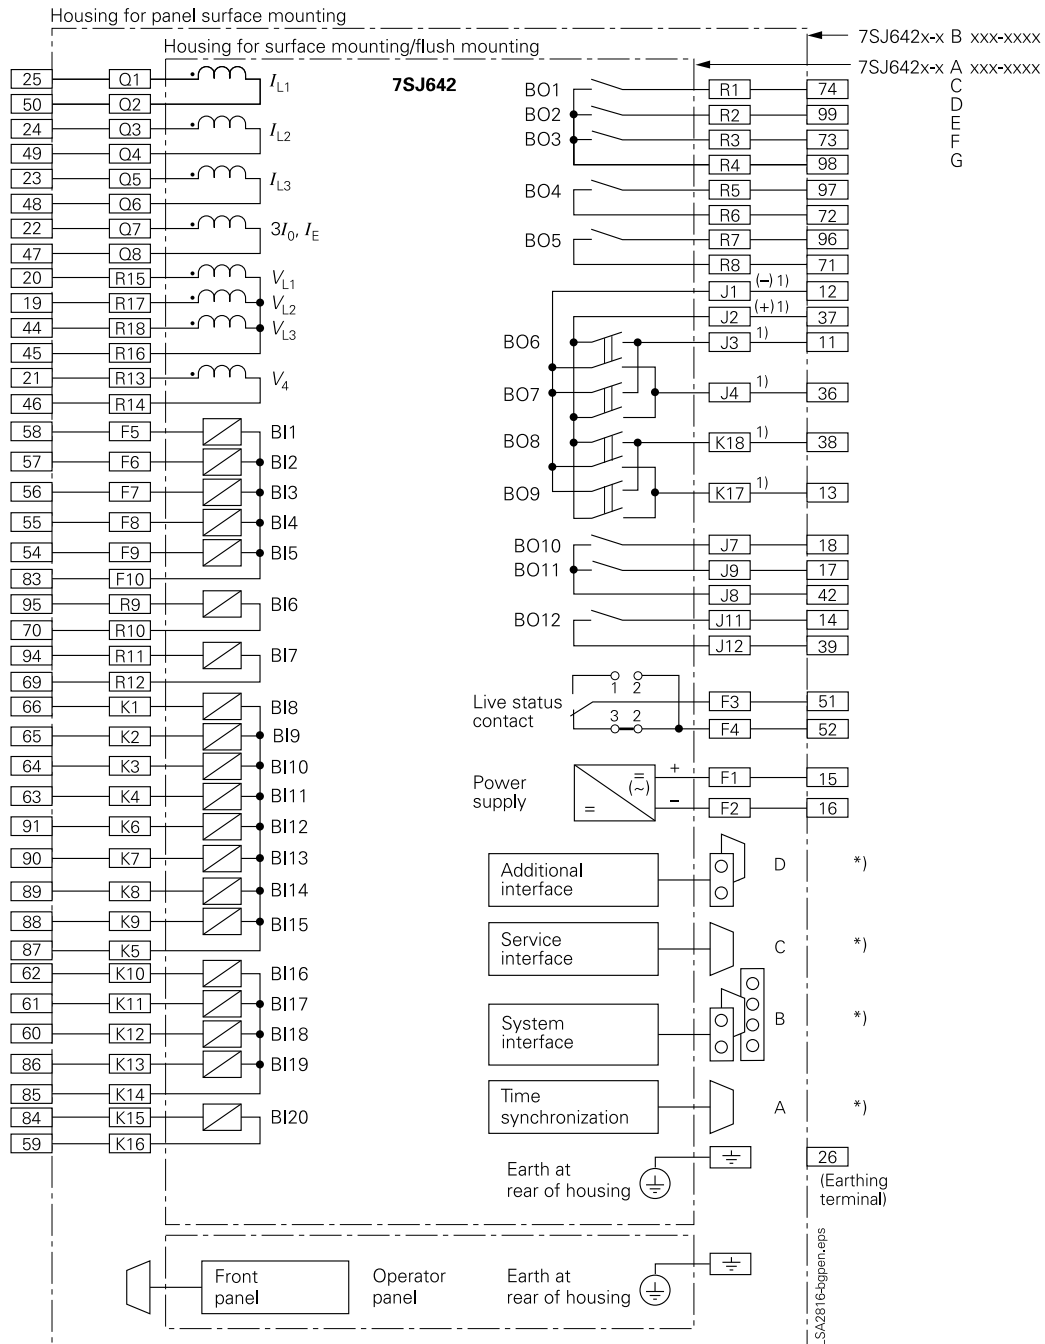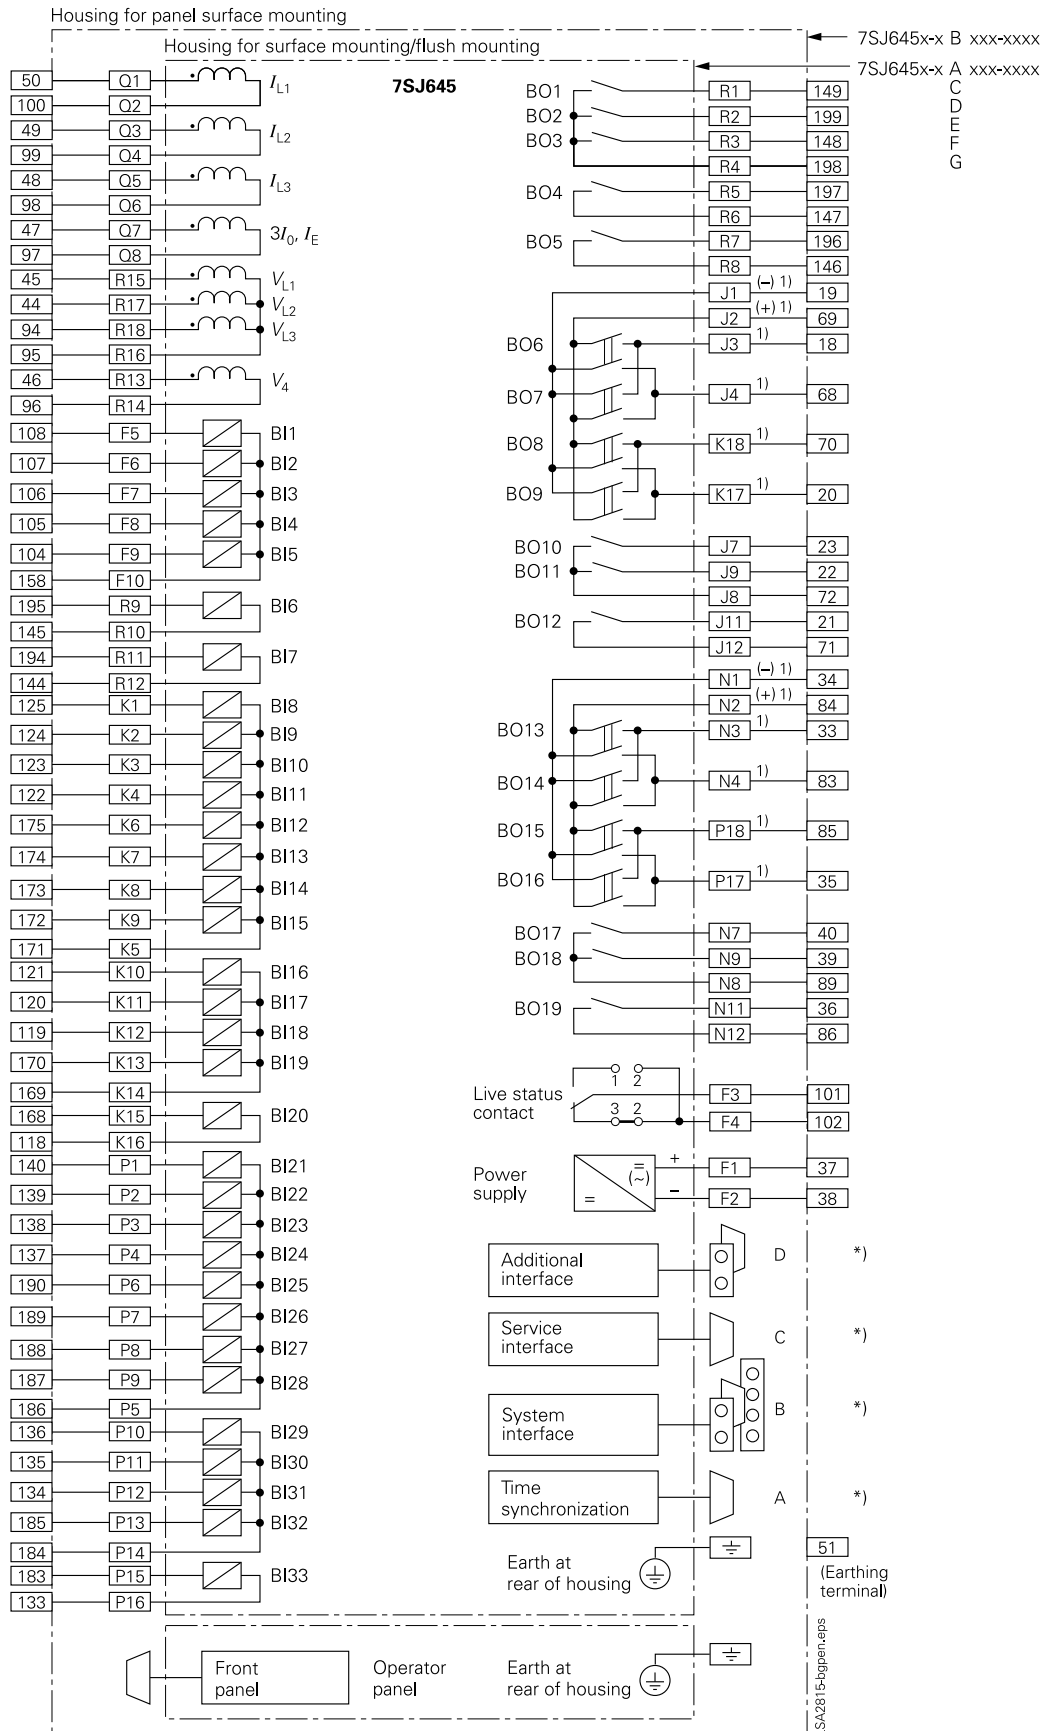7SJ642x-x A xxx-xxxx
C D E F G

Fig. 5/200
7SJ642 connection diagram

*) For pinout of communication ports see part 17 of this catalog. For allocation of terminals of the panel surface mounting version refer to the manual (http://www.siprotec.com).

1) Power relays are intended to directly control motorized switches. The power relays are interlocked so only one relay of each pair can close at a time, in order to avoid shorting out the power supply. The power relay pairs are BO6/BO7, BO8/BO9. If used for protection purposes only one binary output of a pair can be used.

Connection diagram

Housing for panel surface mounting
Housing for surface mounting/flush mounting

7SJ645x-x B xxx-xxxx
7SJ645x-x A xxx-xxxx
C
D
E
F
G

7SJ645

50	Q1	I_{L1}	
100	Q2		
49	Q3	I_{L2}	
99	Q4		
48	Q5	I_{L3}	
98	Q6		
47	Q7	$3I_0, I_E$	
97	Q8		
45	R15	V_{L1}	
44	R17	V_{L2}	
94	R18	V_{L3}	
95	R16		
46	R13	V_4	
96	R14		

108	F5	BI1
107	F6	BI2
106	F7	BI3
105	F8	BI4
104	F9	BI5
158	F10	
195	R9	BI6
145	R10	
194	R11	BI7
144	R12	
125	K1	BI8
124	K2	BI9
123	K3	BI10
122	K4	BI11
175	K6	BI12
174	K7	BI13
173	K8	BI14
172	K9	BI15
171	K5	
121	K10	BI16
120	K11	BI17
119	K12	BI18
170	K13	BI19
169	K14	
168	K15	BI20
118	K16	
140	P1	BI21
139	P2	BI22
138	P3	BI23
137	P4	BI24
190	P6	BI25
189	P7	BI26
188	P8	BI27
187	P9	BI28
186	P5	
136	P10	BI29
135	P11	BI30
134	P12	BI31
185	P13	BI32
184	P14	
183	P15	BI33
133	P16	

BO	Terminal	No.
BO1	R1	149
BO2	R2	199
BO3	R3	148
	R4	198
BO4	R5	197
	R6	147
BO5	R7	196
	R8	146
	J1 (−)1)	19
	J2 (+)1)	69
BO6	J3 1)	18
BO7	J4 1)	68
BO8	K18 1)	70
BO9	K17 1)	20
BO10	J7	23
BO11	J9	22
	J8	72
BO12	J11	21
	J12	71
	N1 (−)1)	34
	N2 (+)1)	84
BO13	N3 1)	33
BO14	N4 1)	83
BO15	P18 1)	85
BO16	P17 1)	35
BO17	N7	40
BO18	N9	39
	N8	89
BO19	N11	36
	N12	86

Live status contact — F3 101, F4 102

Power supply — F1 37, F2 38

Additional interface — D *)
Service interface — C *)
System interface — B *)
Time synchronization — A *)

Earth at rear of housing
51 (Earthing terminal)

Front panel — Operator panel — Earth at rear of housing

*) For pinout of communication ports see part 17 of this catalog. For allocation of terminals of the panel surface mounting version refer to the manual (http://www.siprotec.com).

1) Power relays are intended to directly control motorized switches. The power relays are interlocked so only one relay of each pair can close at a time, in order to avoid shorting out the power supply. The power relay pairs are BO6/BO7, BO8/BO9, BO13/BO14, BO15/BO16. If used for protection purposes only one binary output of a pair can be used.

Fig. 5/201
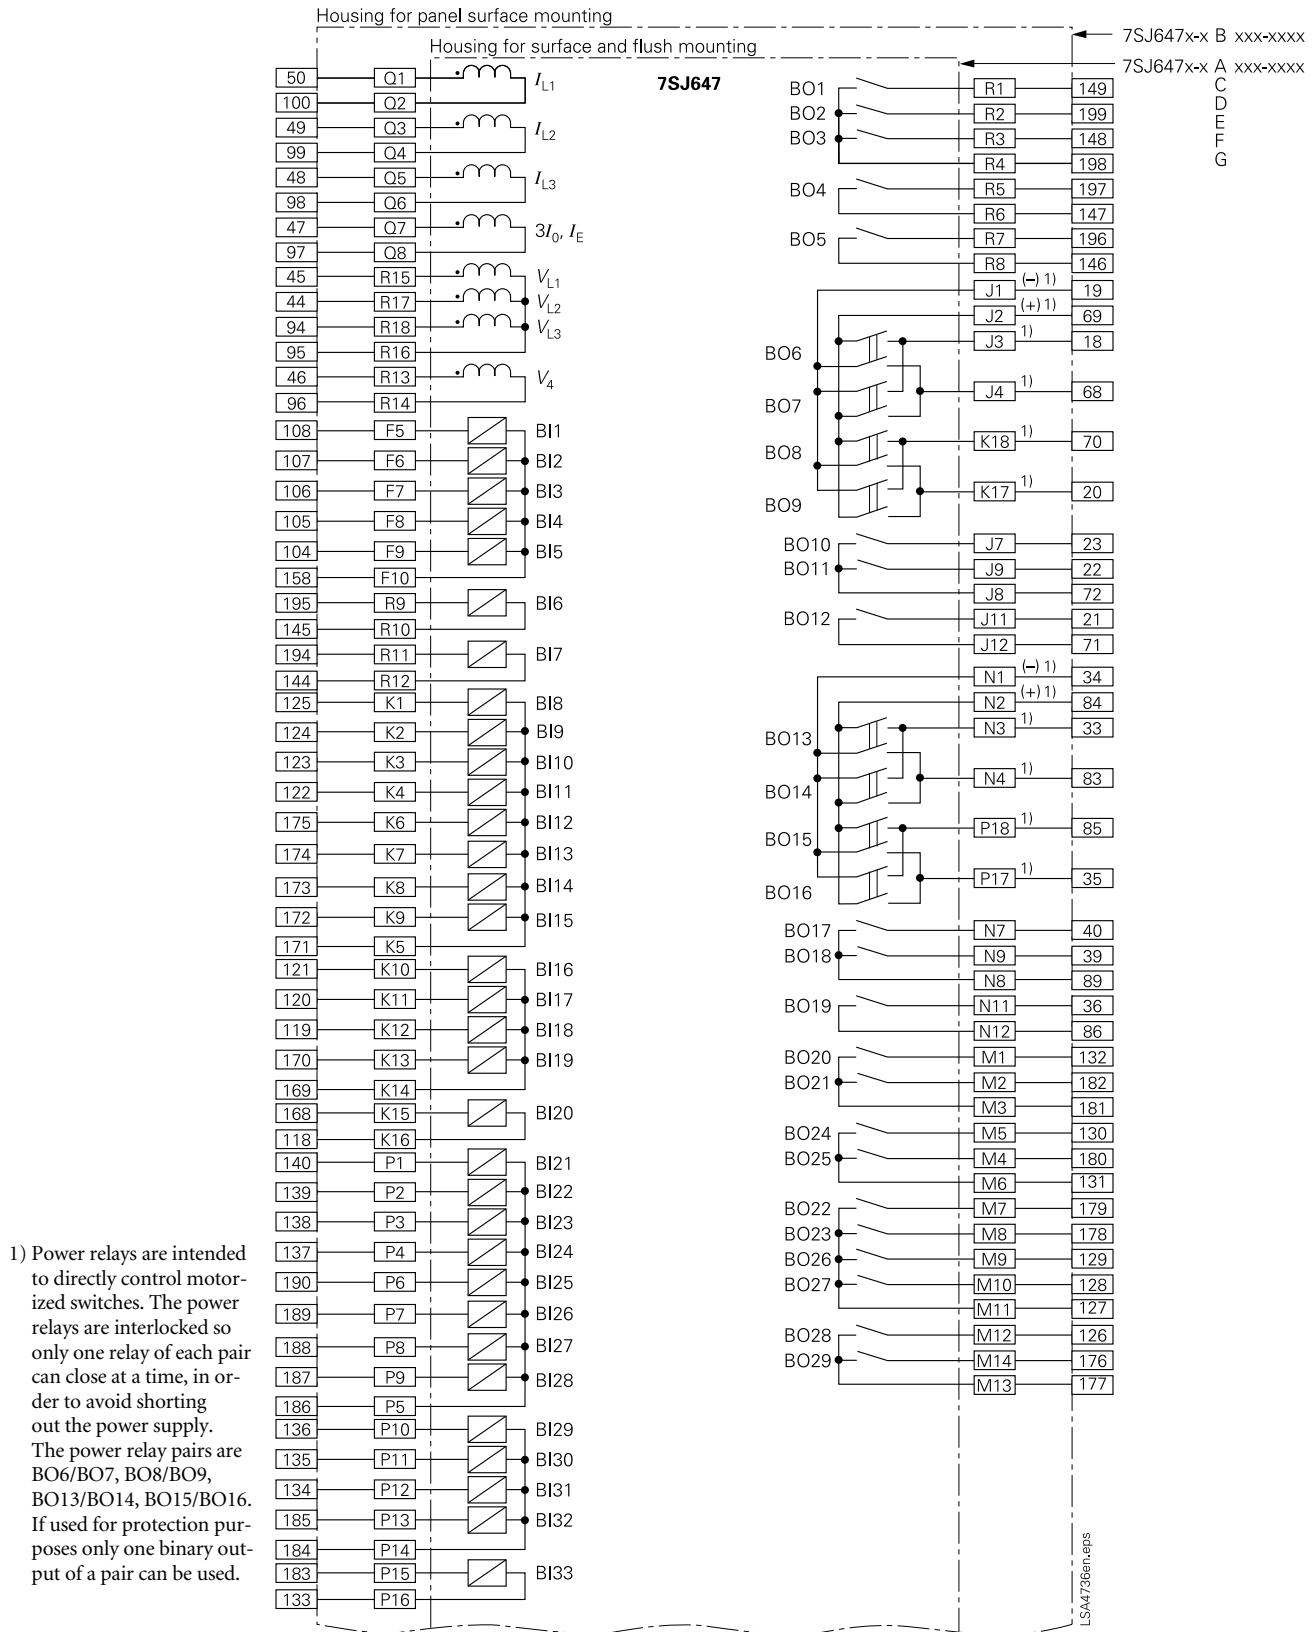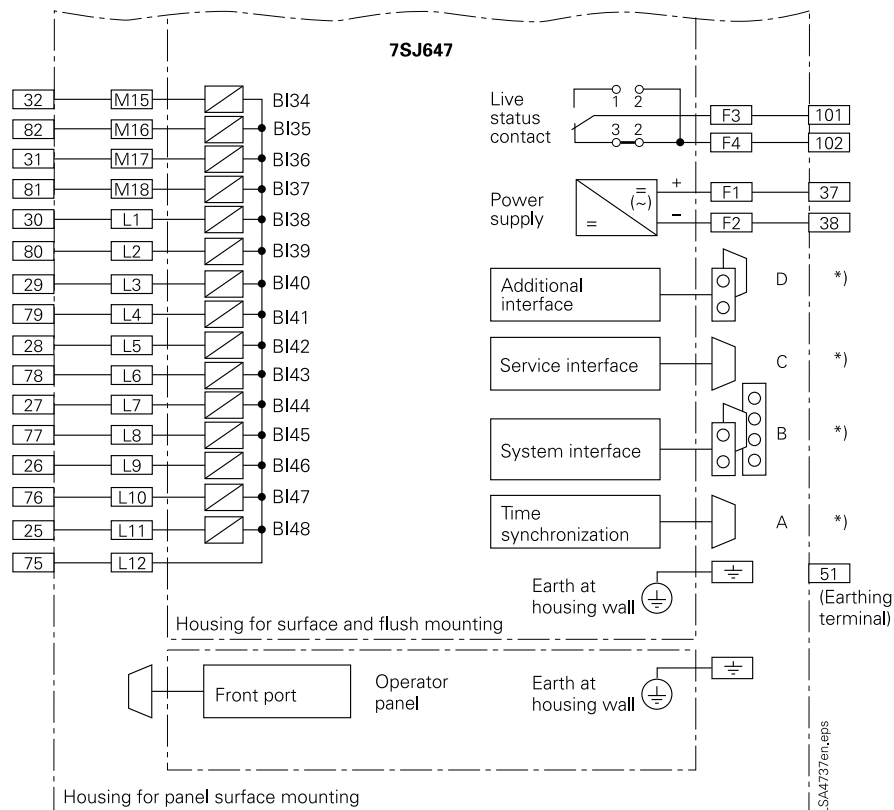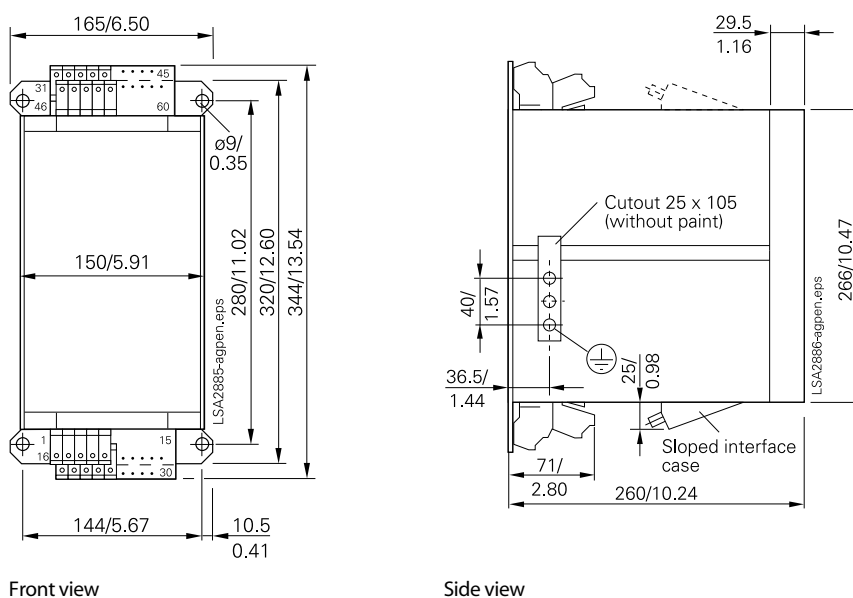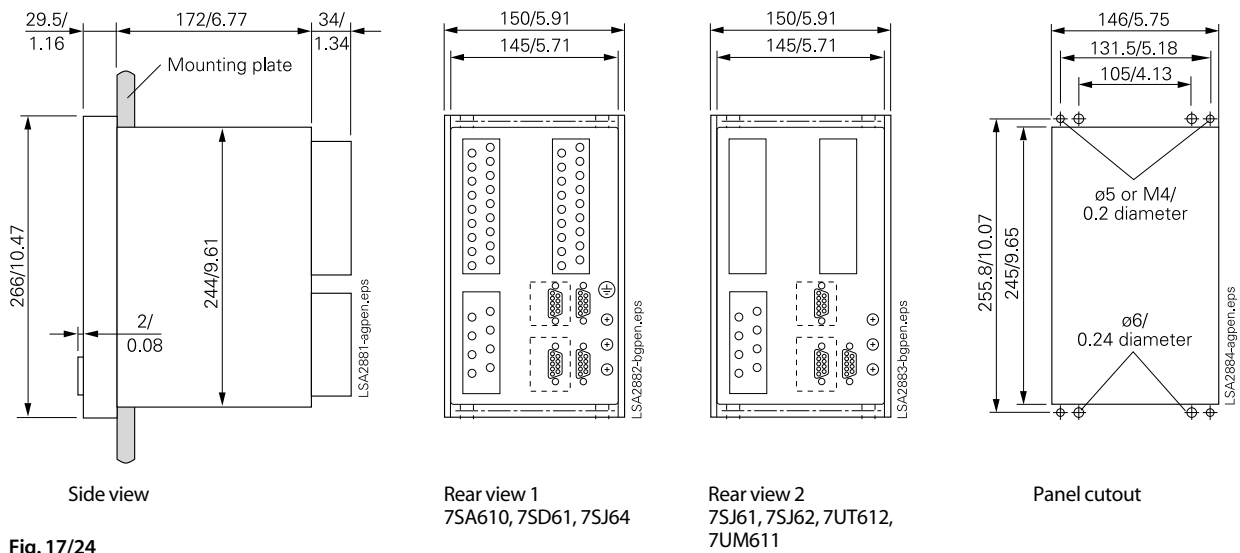7SJ645 connection diagram

Connection diagram

Housing for panel surface mounting

Housing for surface and flush mounting

7SJ647

Fig. 5/202
7SJ647 connection diagram part 1;
continued on following page

1) Power relays are intended to directly control motorized switches. The power relays are interlocked so only one relay of each pair can close at a time, in order to avoid shorting out the power supply. The power relay pairs are BO6/BO7, BO8/BO9, BO13/BO14, BO15/BO16. If used for protection purposes only one binary output of a pair can be used.

Connection diagram

Fig. 5/203
7SJ647 connection diagram
part 2

*) For pinout of communication ports see part 17 of this catalog. For allocation of terminals of
the panel surface mounting version refer to the manual (http://www.siprotec.com).

Dimension drawings in mm / inch

Dimension drawings for SIPROTEC 4
1/3 x 19" housing (7XP20)

29.5/ 1.16   172/6.77   34/ 1.34

Mounting plate

266/10.47   244/9.61   2/ 0.08

LSA2881-agpen.eps

Side view

Fig. 17/24
Housing for panel flush mounting/
cubicle mounting (1/3 x 19")

150/5.91
145/5.71

LSA2882-bgpen.eps

Rear view 1
7SA610, 7SD61, 7SJ64

150/5.91
145/5.71

LSA2883-bgpen.eps

Rear view 2
7SJ61, 7SJ62, 7UT612,
7UM611

146/5.75
131.5/5.18
105/4.13

ø5 or M4/
0.2 diameter

ø6/
0.24 diameter

255.8/10.07   245/9.65

LSA2884-agpen.eps

Panel cutout

165/6.50

31 45
46 60

ø9/ 0.35

150/5.91

1 15
16 30

144/5.67   10.5 0.41

280/11.02   320/12.60   344/13.54

LSA2885-agpen.eps

Front view

Fig. 17/25
1/3 x 19" surface-mounting housing

29.5 1.16

Cutout 25 x 105
(without paint)

40/ 1.57

36.5/ 1.44

25/ 0.98

71/ 2.80   260/10.24

Sloped interface
case

266/10.47

LSA2886-agpen.eps

Side view

5

5

Dimension drawings in mm / inch

Dimension drawings for SIPROTEC 4
1/2 x 19" flush-mounting housings (7XP20)

Side view 1

Side view 2

Panel cutout
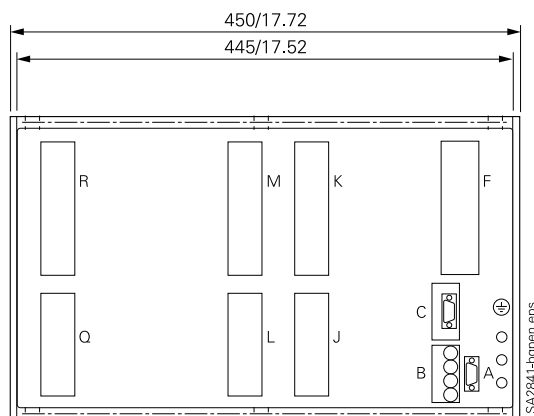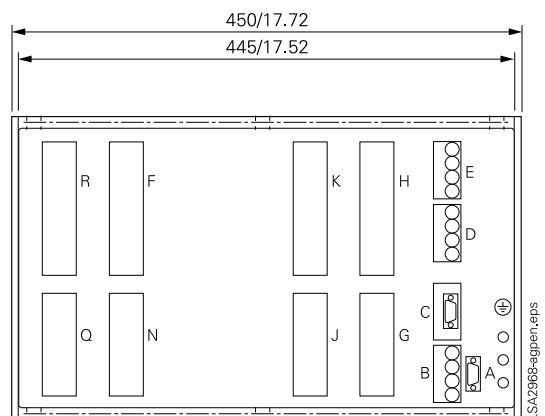

Rear view 1
7SA61/63, 7UM621, 7UM623
7SJ64

Rear view 2
7SJ63, 7UM612, 6MD63
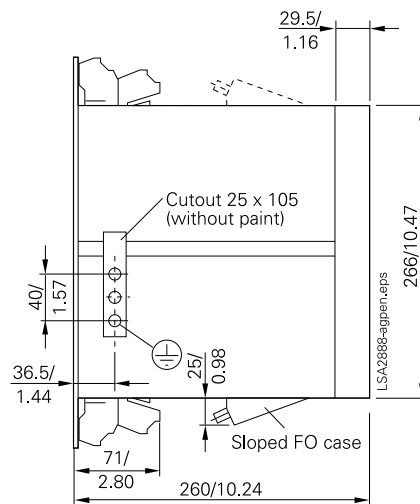

Rear view 3
7SA522, 7SD52/53

Rear view 4
7UT613

Fig. 17/26
1/2 x 19" flush-mounting housing

Dimension drawings in mm / inch

Dimension drawings for SIPROTEC 4
1/1 x 19" flush-mounting housings (7XP20)

29.5/1.16   172/6.77   34/1.34

Mounting plate

266/10.47   244/9.61   2/0.08

Side view 1

29.5/1.16   172/6.77   29/1.14 30/1.18

Mounting plate

266/10.47   244/9.61   2/0.08   34/1.34

Side view 2

446/17.56
223/8.78
7.3/0.29 13.2/0.52   6.3/0.25 6.9/0.27   13.2/0.52 7.3/0.29

ø6/0.24 diameter ø5 or M4/0.2 diam.
ø5 or M4/0.2 diam. ø6/0.24 diameter   ø6/0.24 diameter ø5 or M4/0.2 diam.
255.8/10.07 245/9.65
ø5 or M4/0.2 diam. ø6/0.24 diameter
5.4/0.21   6.9/0.27 6.3/0.25

Panel cutout

450/17.72
445/17.52

R P M* K H** F
Q N L* J G** D C
B

* Terminals M and L additionally for 7UT635 and 7SJ647 only
** Terminals H and G not for 7SJ645 and 7SJ647

Rear view 1
7SA6, 7UM622, 7SJ64, 7UT633, 7UT635

450/17.72
445/17.52

R M K F
Q L J C
B A

Rear view 2
7SJ63, 6MD63

450/17.72
445/17.52

R F K H E
Q N J G D
C
B A

Rear view 3
7SA522, 7SD52/53

Fig. 17/28
1/1 x 19" flush-mounting housing

5

Dimension drawings for SIPROTEC 4
1/2 and 1/1 x 19" surface-mounting housings
(7XP20)
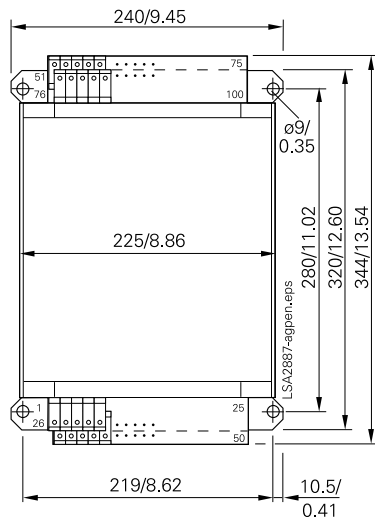
Front view
1/2 x 19" surface-mounting
housing 7XP20

Side view
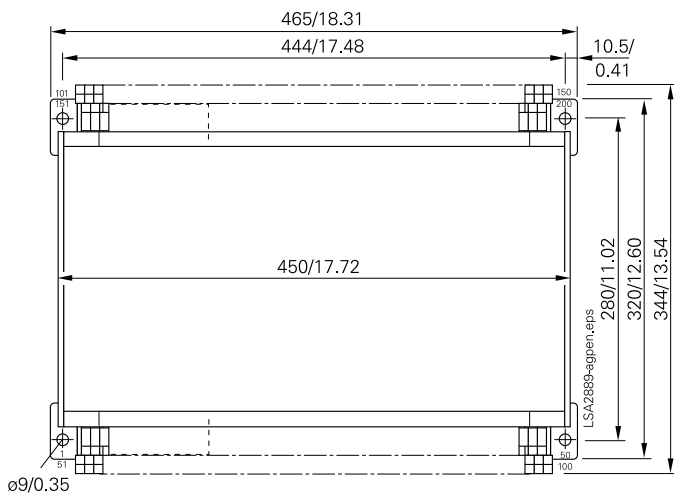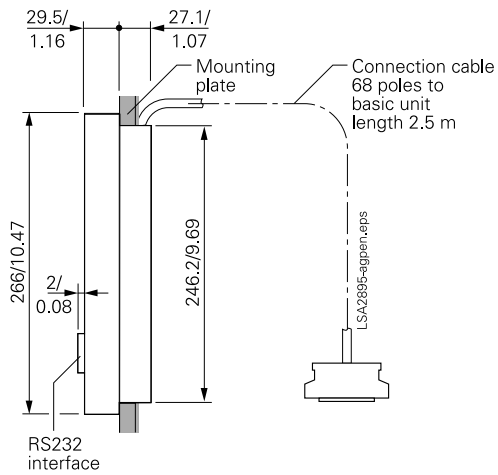

Front view
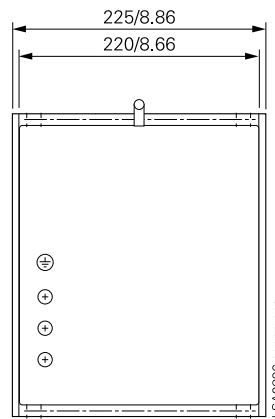1/1 x 19" surface-mounting housing 7XP20
(without sloped FO case)

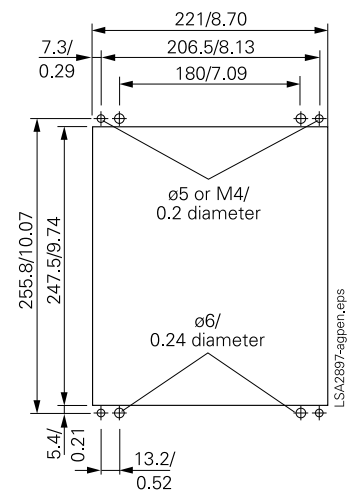**Fig. 17/29**
1/2 and 1/1 x 19" surface-mounting housing

Dimension drawings for SIPROTEC 4
1/2 and 1/1 x 19" housings
with detached operator panel

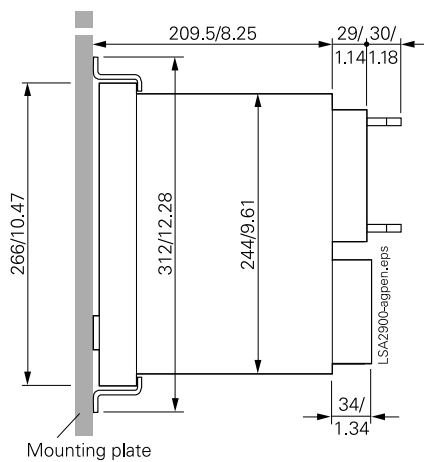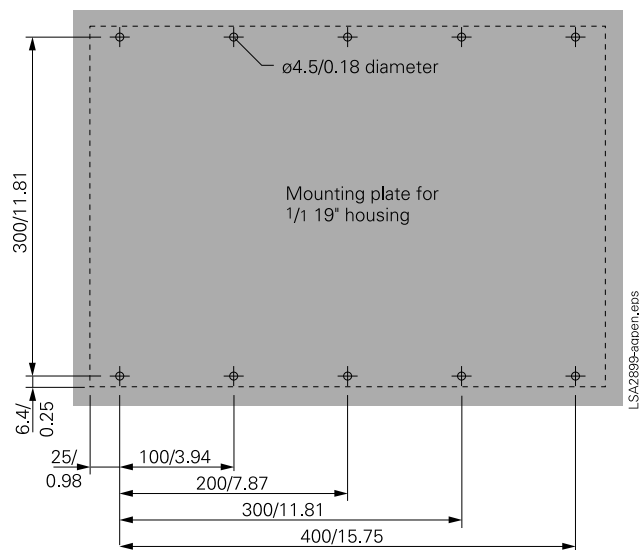Detached operator panel (side view)
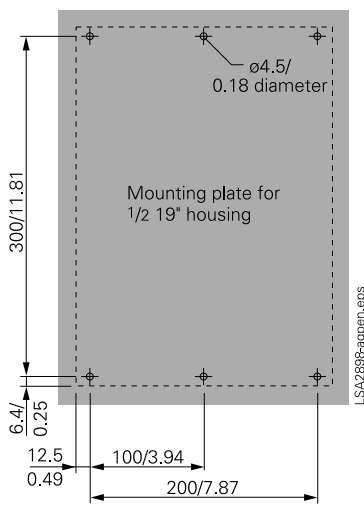
Rear view

Panel cutout

Fig. 17/30
Housing with detached or no
operator panel

5